


# **HELI-PLASI 2000**

## **Pulse Light Approach Slope Indicator**

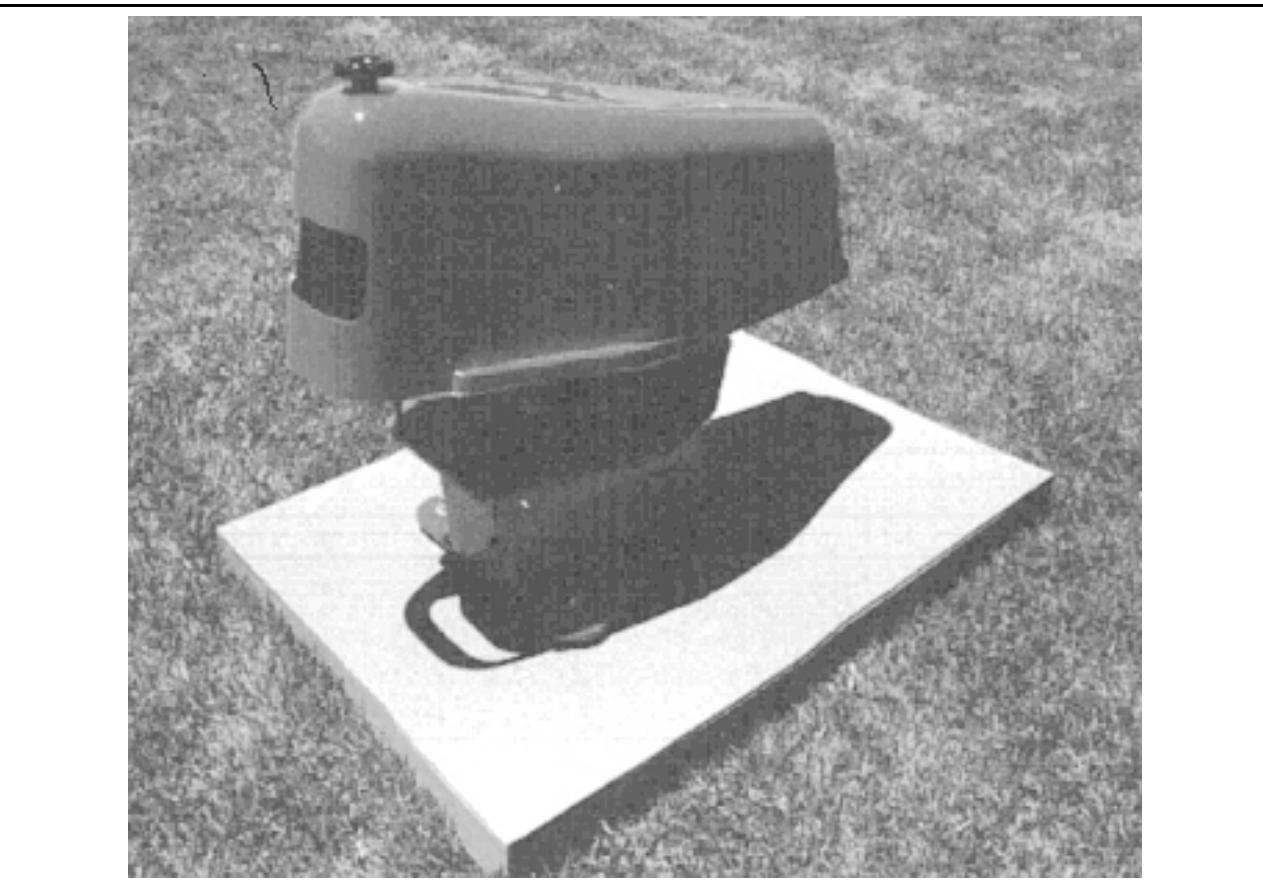

### **SERVICE, MAINTENANCE & ILLUSTRATED PARTS MANUAL**

*Manual Number PLF003*

*5 October 2000*

**APPLICABLE TO**  
**DA500098-1, DA500098-2, DA500099-3, DA500099-4**  
**HELI-PLASI 2000 SYSTEMS**



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

## **SECTION I - INTRODUCTION**

1.0	Purpose .....	4
1.1	Description of Systems .....	4
1.2	Power .....	4
1.3	Cooling .....	5
1.4	Automatic Lamp Changing .....	5
1.5	Photo Cell .....	5
1.6	Tilt Switches .....	6
1.7	Power Control .....	6
1.8	Signal Failure Modes .....	6

## **SECTION II - RECOMMENDED SERVICING SCHEDULE**

2.1	Servicing .....	7
-----	-----------------	---

## **SECTION III - HELI-PLASI 2000 MAINTENANCE**

3.0	Routine Maintenance .....	13
3.0.1	Relamping .....	13
3.0.2	Shutter Chain Tensioning .....	13
3.1	Component Removal and Installation .....	14
3.1.1	Control Module: .....	14
3.1.2	Shutter Motors .....	16
3.1.3	Lamp Changer Solenoid .....	17
3.1.4	Shutter Chain .....	18
3.2	HELI-PLASI 2000 Maintenance Tools: .....	19



## **SECTION IV - TROUBLE ANALYSIS CHART**

TROUBLE ANALYSIS CHART .....	20
------------------------------	----

## **SECTION V - HELI-PLASI 2000 ILLUSTRATED PARTS LIST**

IPL Figure 1 HELI-PLASI 2000 Assembly .....	27
IPL Figure 2 Pulse Generator Assembly .....	29
IPL Figure 3 Main Generator Assembly .....	31
IPL Figure 4 Lamp Changer Assembly .....	35
IPL Figure 5 Lamp Table Assembly .....	37
IPL Figure 6 Lamp Table Pedestal Assembly .....	39
IPL Figure 7 Web Assembly .....	41
IPL Figure 8 Generator Plate Assembly .....	45
IPL Figure 9 Bearing Block Assembly .....	49
IPL Figure 10 Condenser Lens Assembly .....	51
IPL Figure 11 Leg Assembly .....	53
IPL Figure 12 Turn Table Final Assembly .....	55
IPL Figure 13 Base Assembly .....	58
IPL Figure 14 Spindle Assembly .....	61
IPL Figure 15 Motor Bracket Assembly .....	64
IPL Figure 16 Final Door Assembly .....	67



# **HELI-PLASI 2000 SYSTEM PULSE LIGHT APPROACH SLOPE INDICATOR**

## **SERVICE AND MAINTENANCE MANUAL**

### **SECTION I - INTRODUCTION**

#### **1.0 Purpose**

This Manual provides the information required for service of the HELI-PLASI 2000 system.

The HELI-PLASI 2000 will require a minimum of servicing. It is enclosed in a weather tight housing and is designed for continuous unattended operation. With proper installation and adherence to the recommended servicing schedule presented in Section II, the unit is designed to deliver trouble free operation. The unit may be maintained readily by technician level personnel.

The program outlined in Section II provides a recommended servicing schedule based on continuous system usage. The user should consider the schedule as a guide, and based on local environmental conditions and service experience, may find it expedient to either increase or decrease the frequency of some of the listed service actions.

#### **1.1 Description of Systems**

The light beam is generated through the use of optical components, two moveable shutter chains, and a green/red filter. One tungsten-halogen lamp is positioned behind a condenser lens. For reliability, an automatic lamp changer positions a new lamp if the one in use should fail. Under normal conditions, average lamp life is approximately 600 to 650 hours at 108V. At 100V, lamp life typically doubles.

The pulsing beam is created by a moving chain with triangular shutter elements, positioned in front of and close to the condenser lens. The height of the steady white light is a function of the distance between the upper elements and the edge of the red filter. The number of pulses per second is determined by the number of elements per second which interrupt the pilot's view of the light behind the shutter.

To project a steady red and a red pulsing beam indicating "below glide path" information, a red filter is installed behind the upper shutter element. The objective lens inverts the beam so that the upper elements generate the pulsing "low" beam and the lower shutter elements generate "high" beam.

#### **1.2 Power**

The basic power supply required at the HELI-PLASI 2000 unit shall be a nominal  $120 \pm 10\%$  VAC, with a frequency of 50 or 60 hertz, single phase alternating current. To improve the service life of the BVA lamps, a voltage limiter unit is used to provide reduced and stabilized voltage to the lamp.



Input power is routed to the Control Module Assembly which contains the power switch, a circuit breaker, and all the control relays.

### 1.3 Cooling

To dissipate heat created by the lamp and other electronic components, an exhaust fan and a circulating fan are mounted within the HELI-PLASI 2000. Internal air is circulated around the lamp, condenser lens and chains, by a single fan mounted over the active lamp. Outside ambient air is drawn through the unit by the exhaust fan located on the front plate which exhausts out the front of the HELI-PLASI 2000 and down across the window. A replaceable/reusable filter is located at the rear of the base plate, inside the unit.

Temperature sensors are located at three points in the HELI-PLASI 2000: One inside the control module, one mounted under the circulating fan, and one mounted to the pulse generator plate above the chain drive motors.

The control module will shut off the exhaust fan if the temperature inside the HELI-PLASI 2000 is less than 46 degrees F and restart the fan above 52 degrees F. It will turn on the heaters if the temperature of the aluminum plate is less than 32 degrees F and turn them off when the temperature rises above 36 degrees F. The HELI-PLASI 2000 will shut down if the temperature of the control module is above 175 degrees F or if the temperature of the sensor next to the circulating fan goes above 250 degrees F.

### 1.4 Automatic Lamp Changing

The HELI-PLASI 2000 contains an automatic lamp changing system which will rotate a new lamp into operating position when the lamp in service fails. A current sensor in the control module detects when power is on and when the lamp is not drawing current. The sensor circuit then switches power to the lamp table solenoid which rotates the lamp table one position, moving a new lamp into operating position. When the fourth lamp is rotated to the operating position, a signal is generated by the lamp table which tells the control module not to attempt any further lamp changes. This signal can also be used to drive a relay for external last lamp indicators.

### 1.5 Photo Cell

Automatic dimming to adjust lamp brightness for night operation is provided by a photo detector and the control module. The photo sensor generates a DC voltage, proportional to the ambient light intensity, which is read by the control module. If the light intensity is less than 320 lux, the control module drives the DIM input of the Voltage Limiter which in turn reduces the lamp voltage. If the light intensity is greater than 590 lux, the control module does not drive the DIM input and full regulated voltage is applied to the lamp. In either case, a 60 second delay is added before the DIM input is changed. Night voltage adjustment procedures are described under paragraph 4.2 of the HELI-PLASI 2000 Operation and Installation Manual.



## 1.6 Tilt Switches

Tilt switches have been incorporated in the system which will automatically switch off the HELI-PLASI 2000 if it has been jolted in such a way as to move the housing more than 0.5 degrees up to 0.5 degrees down. A ten second time delay is added by the control module to prevent the tilt switch from responding to ordinary transient disturbances such as taxiing airplanes or hovering helicopters.

## 1.7 Power Control

The HELI-PLASI 2000 is controlled with the "on-off-remote" switch. To manually turn the unit on, the switch should be in the "On" position. When the switch is in the "Remote" position, on-off control can be accomplished by wire from a remote site or by radio using an FAA-L-854 receiver-controller.

## 1.8 Signal Failure Modes

The HELI-PLASI 2000 system is a fail safe design which ensures that any malfunction of beam projection will not result in a hazardous situation for approaching aircraft.

There are three potential failure modes of the projected signal.

The first is loss of power to the unit or the projector lamp, which will result in complete loss of signal with no hazard.

The second is failure of the pulse generator drive system and resulting loss of one or both pulse signals. This type of failure will be detected by electronic sensors (pulse detectors) and the unit will shut down, resulting in complete loss of signal with no hazard.

The third failure is if the unit is knocked out of alignment. The tilt switch will be activated and will shut down the unit, resulting in complete loss of signal with no hazard. The tilt switch is pre-set at the factory on the inclinometer arm and requires no adjustments.

If either shutter chain stops moving, a slotted sensor (Missing Pulse Detector) mounted on each chain will indicate that fact to the control module. The control module will then shut down the HELI-PLASI 2000 and put a chain fault message on the display panel. Since the Missing Pulse Detector signal must alternate between high and low states to be valid, any fault in the missing pulse detector-either shorted or open-will be detected by the control module as a chain fault.



## SECTION II - RECOMMENDED SERVICING SCHEDULE

- Note:
1. Remove incoming line power before performing service unless noted otherwise.
  2. After performing servicing, carefully replace the shell, ensure that it is firmly seated, and tighten down the hand screw that secures the shell to the main assembly.

### 2.1 Servicing

**CAUTION:** **DO NOT TOUCH LAMPS WITH BARE FINGERS. BODY CHEMICALS WILL CAUSE LAMP TO BECOME OPAQUE. USE CLEAN CLOTH OR GLOVES WHEN HANDLING LAMPS. IF LAMP SURFACES ARE TOUCHED WITH FINGERS, CLEAN WITH ALCOHOL OR SIMILAR CLEANING AGENT.**

Item	Service Frequency	Service Action
Front window-outside.	At lamp change if required.	<ol style="list-style-type: none"><li>1. Clean with optical cleaning solution (Kodak lens cleaning fluid or equivalent) using a lint free cloth or tissue.</li></ol>
Vertical aiming.	Every 6 months, or when unit is visited.	<ol style="list-style-type: none"><li>1. With shell removed, check that the internal level index mark is set to the desired approach angle on the degree scale and that the bubble in the level is centered. (Figure 1)</li><li>2. Adjust if required, see Operation and Installation Manual.</li></ol>


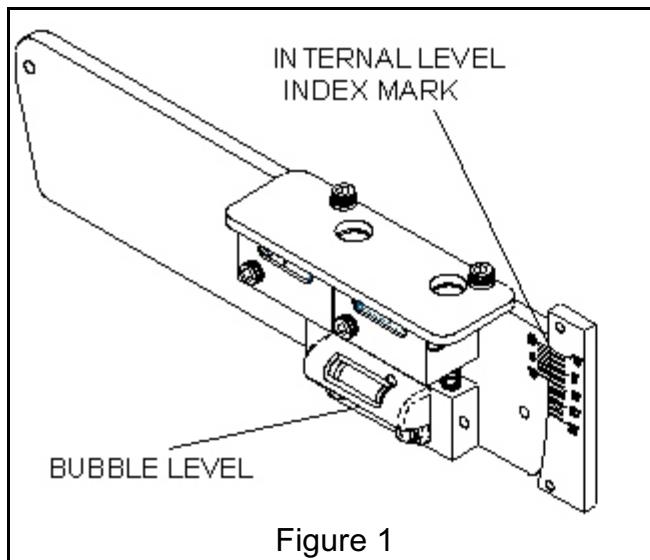


Figure 1

<u>Item</u>	<u>Service Frequency</u>	<u>Service Action</u>
Lamps (See par 2.2)	As required.	<ol style="list-style-type: none"> <li>1. Remove all failed lamps.</li> <li>2. Move lamp in service to No. 1 socket (Figure 2).</li> <li>3. Install new lamps in all other sockets.</li> <li>4. Reset lamp table so No. 1 lamp is in service position. (Rotate Clockwise)</li> </ol>

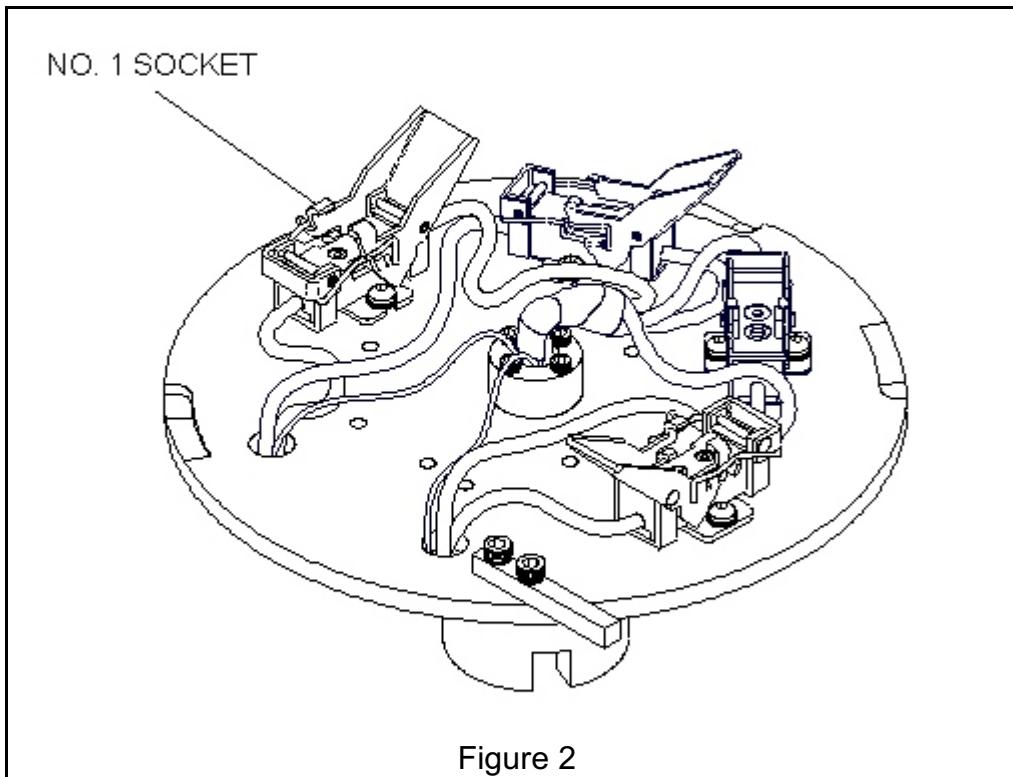

<u>Item</u>	<u>Service Frequency</u>	<u>Service Action</u>
Condenser lens, objective lens, red filter, and inside of window	At lamp change, if required.	<ol style="list-style-type: none"> <li>1. Clean with optical cleaning fluid (Kodak lens cleaning fluid or equivalent) using a lint free cloth or tissue. (Figure 3)</li> <li>2. If any optical components are found damaged, contact DeVore Aviation for instructions at (505) 345-8713</li> </ol>

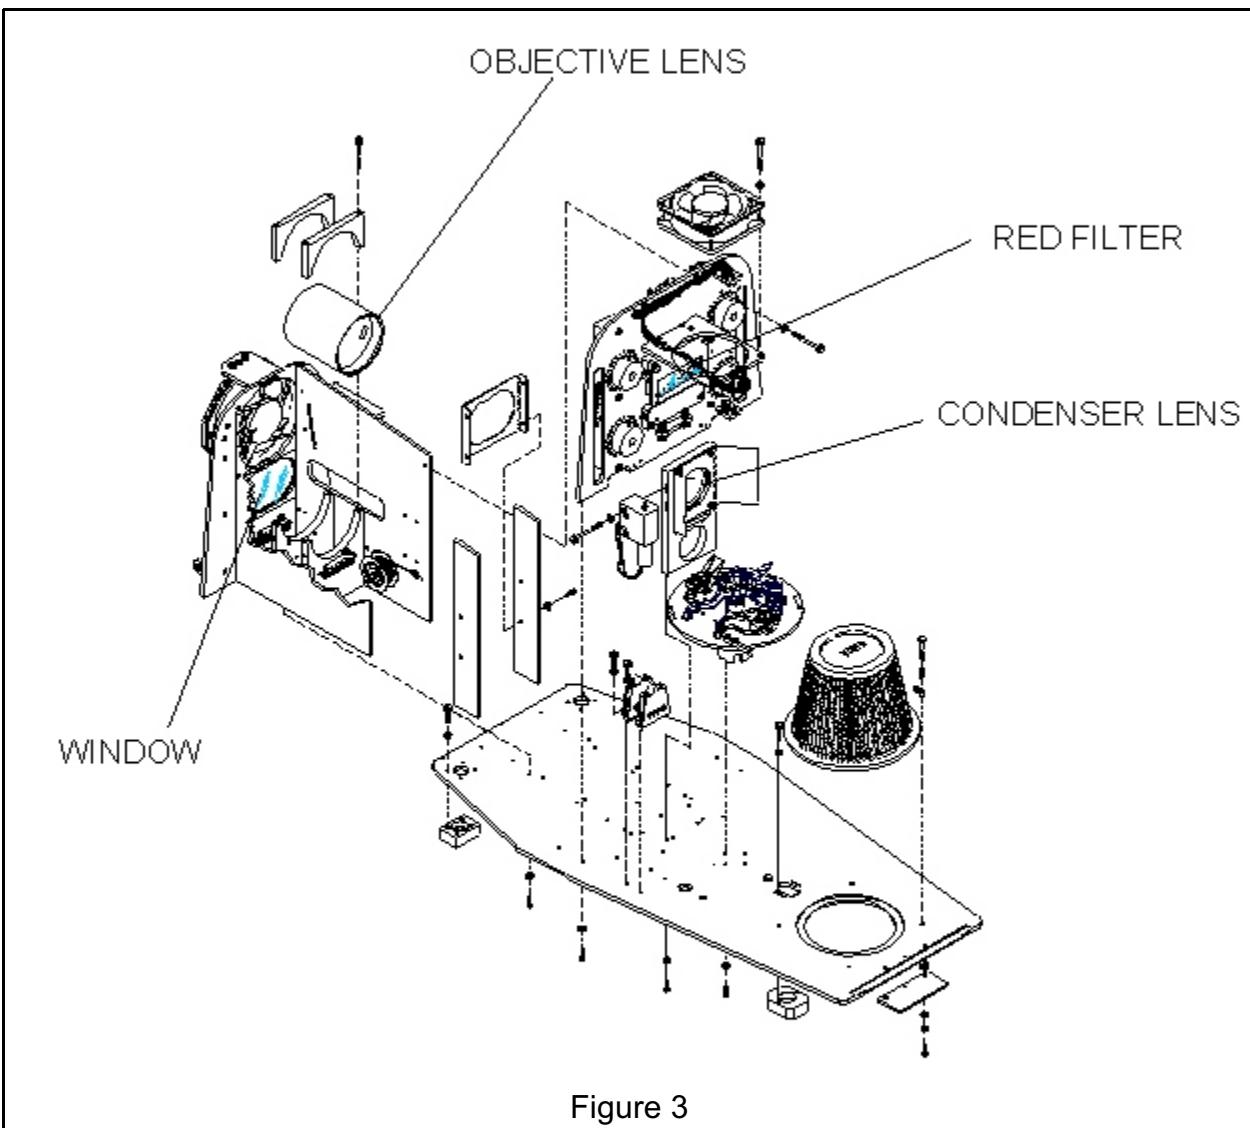


Figure 3



<u>Item</u>	<u>Service Frequency</u>	<u>Service Action</u>
Air inlet	Every 6 months or as required.	<ol style="list-style-type: none"> <li>1. Inspect filter. The filter is Filter Washable/reusable; if it is dirty, clean as follows:</li> <li>2. Remove filter by rotating the four plastic clamps holding it down (Figure 4).</li> <li>3. Lightly tap off surface dust</li> <li>4. Clean in a solution of warm water and mild soap detergent.</li> <li>5. Rinse the filter from the inside out. Shake and allow to air dry. Do not use air hose.</li> <li>6. Re-oil filter element with a light weight filter oil, (light weight motor oil may be used). Re-install filter.</li> </ol>

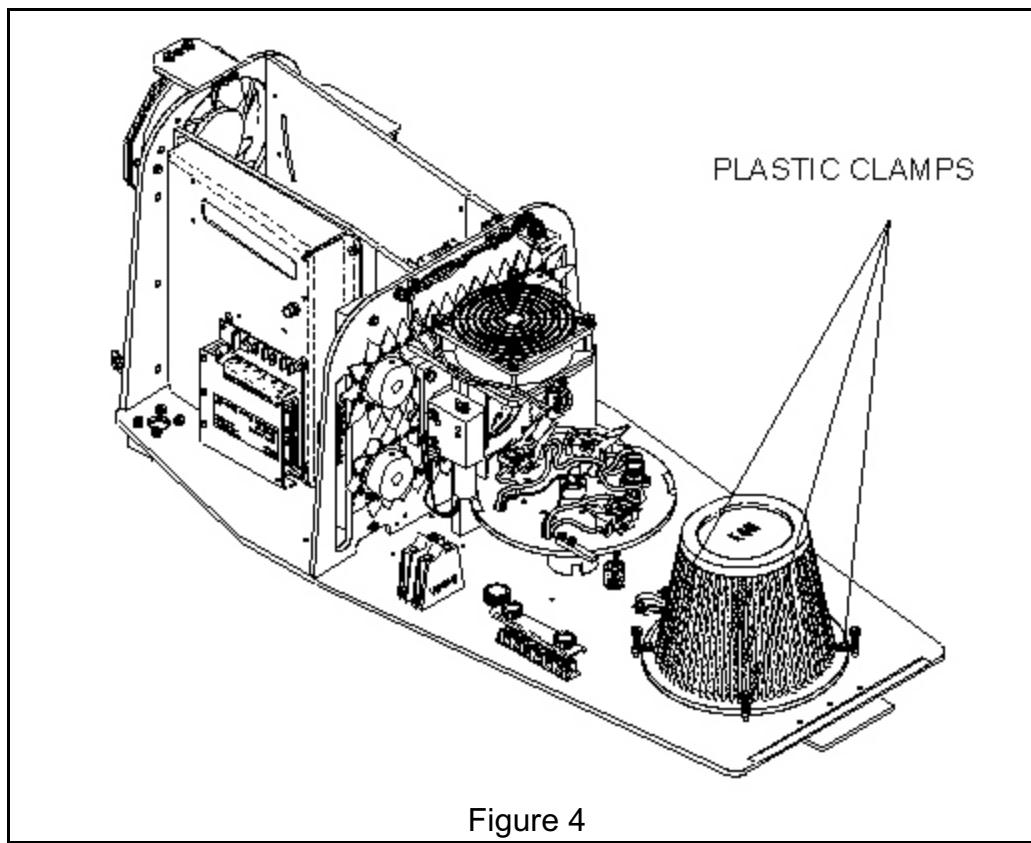


Figure 4



<u>Item</u>	<u>Service Frequency</u>	<u>Service Action</u>
Shutter chains.	Every 6 months	<ol style="list-style-type: none"> <li>1. Lubricate chains and sprocket teeth with Teflon fortified lubricant (SAE 50 weight non- detergent motor oil may be used if Teflon is not available) (Figure 5) . Use sparingly. Apply lubricant only to chain and sprocket teeth. Lubricant must not contaminate the red filter or condenser lens.</li> <li>2. Check tightness of all sprocket set screws (8 places).</li> <li>3. Check chain tension for upper and lower chains. Turn power on. With chain running, chain sag should be approximately one eighth inch. If necessary, adjust tension per paragraph. 3.0.2</li> </ol>


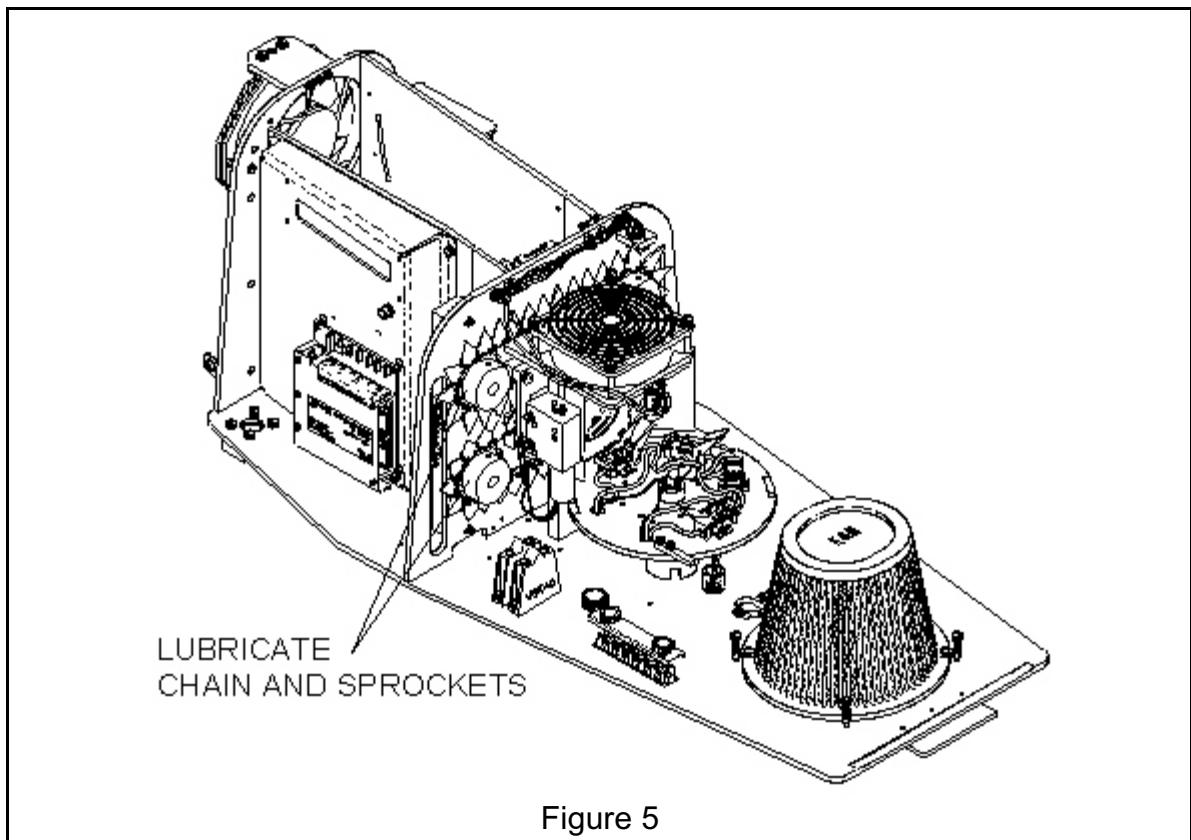


Figure 5



<u>Item</u>	<u>Service Frequency</u>	<u>Service Action</u>
Circulation exhaust fan.	Every 6 months.	1. With housing open and power on, check for airflow output of the interior circulation fan and the exhaust fan.
Photo sensor	Every 6 months	1. With system operating on daytime lamp voltage, cover the photo sensor (Fig. 6) to prevent it from seeing any ambient light. Within 45 to 75 seconds, the lamp voltage should drop to the night setting (58V to 62V). Uncover the photo sensor and in 45 to 75 seconds, the lamp will return to the daytime setting.

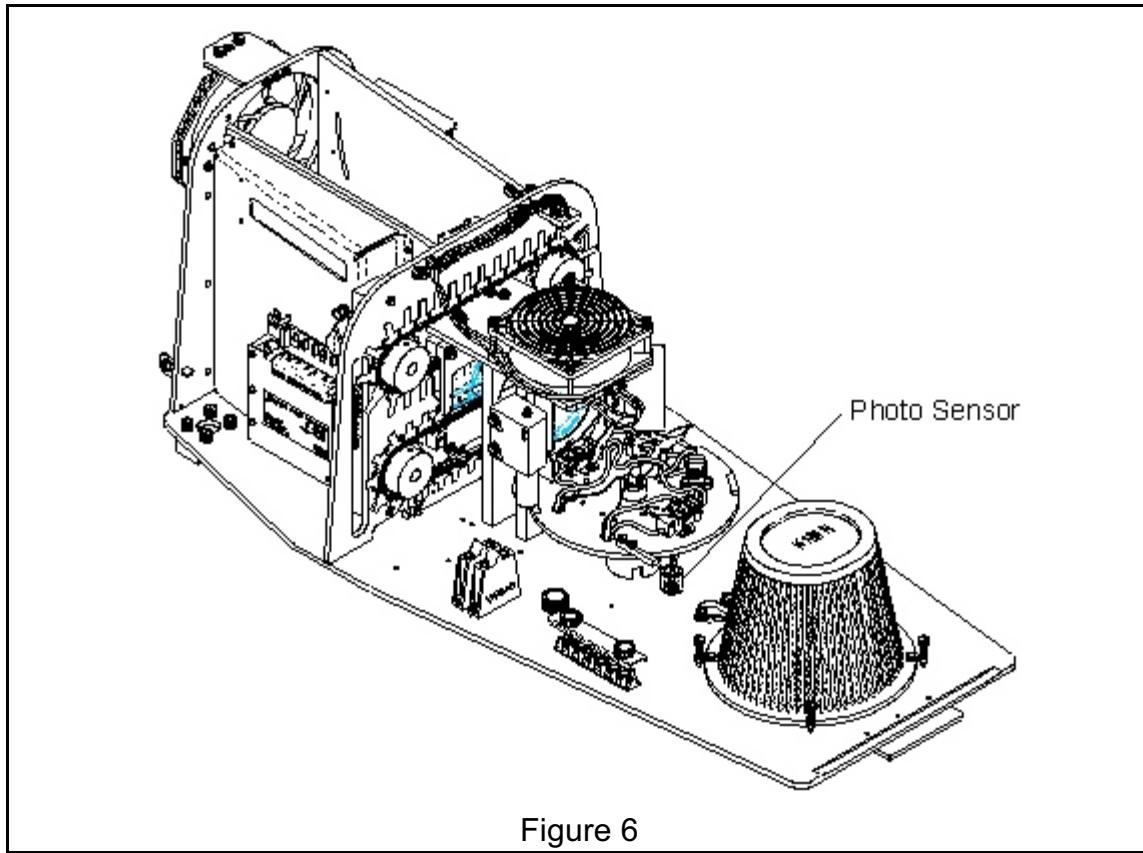

## SECTION III - HELI-PLASI 2000 MAINTENANCE

### 3.0 Routine Maintenance

1. Turn power off before performing maintenance unless noted otherwise.

#### 3.0.1 Relamping

No Tools Required

1. Remove used lamps by depressing socket lever.
2. Move the operating lamp, if serviceable, to No. 1 position (Figure 7). (Rotate Clockwise)

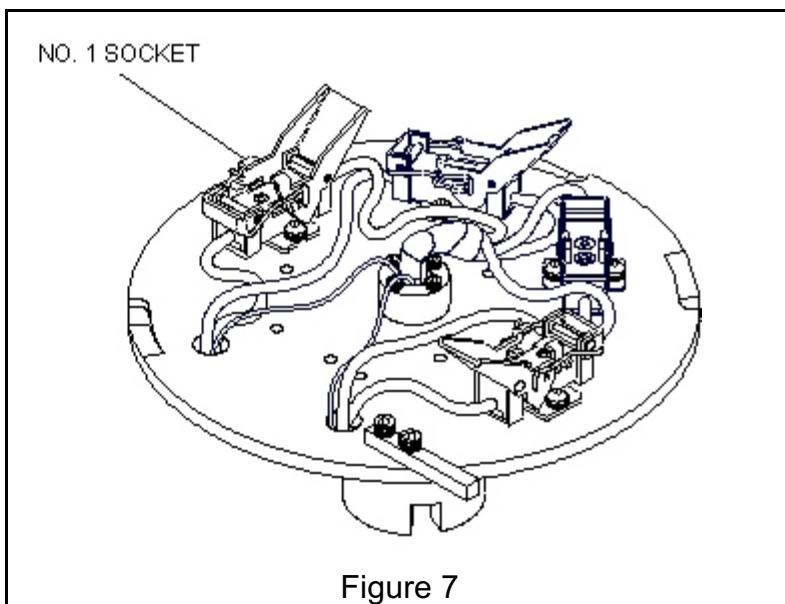


Figure 7

3. Install new BVA (900W, 120V) lamps. Pull socket lever to secure.

**CAUTION:** DO NOT TOUCH LAMP GLASS SURFACE. BODY CHEMICALS CAUSE GLASS LAMP ENVELOPE TO BECOME OPAQUE. HANDLE WITH CLEAN CLOTH OR GLOVES. CLEAN GLASS WITH ALCOHOL OR SIMILAR CLEANING AGENT.

4. Reset table to move No. 1 lamp to the operating position (Figure 7). (Rotate Clockwise)

#### 3.0.2 Shutter Chain Tensioning

Tools Required - 5/32 Allen wrench

1. Remove control module, See Paragraph 3.1.1



**DeVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 13  
10-05-2000

2. Loosen slightly the cap screws (3 places) (Figure 8) securing the bearing block assembly to the pulse generator plate.

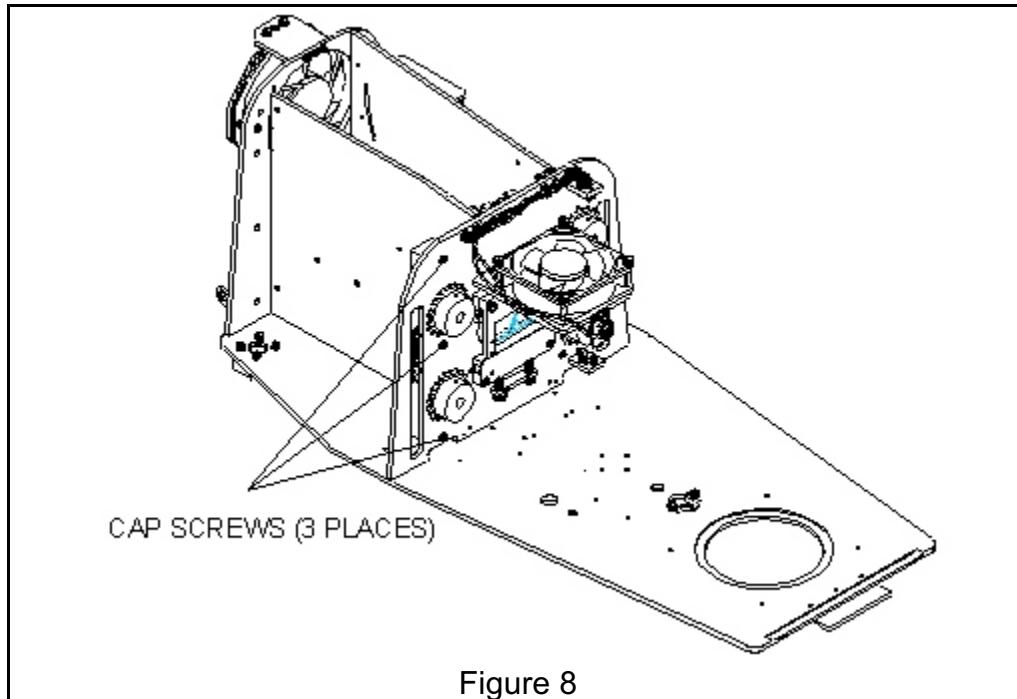


Figure 8

3. Move the Bearing Block Assembly to tension the chains. Both upper and lower chains must be tensioned together.
4. Tighten the three cap screws.
5. Reinstall control module.

Note: Tension is correct when the moving chain can be deflected approximately one quarter to three eighths inch with firm touch of a finger.

### 3.1 Component Removal and Installation

#### 3.1.1 Control Module:

Tools Required - #2 Phillips Screwdriver

**WARNING: ENSURE THAT LINE POWER COMING IN TO THE HELI-PLASI 2000 IS TURNED OFF BEFORE REMOVING OR INSTALLING THE CONTROL MODULE!**

Removal:

1. Remove the Voltage Limiter:
  - a. Unplug the 6 pin connector from the voltage limiter.



- b. Remove the two plastic pins that prevent upward movement of the Limiter (Figure 9).

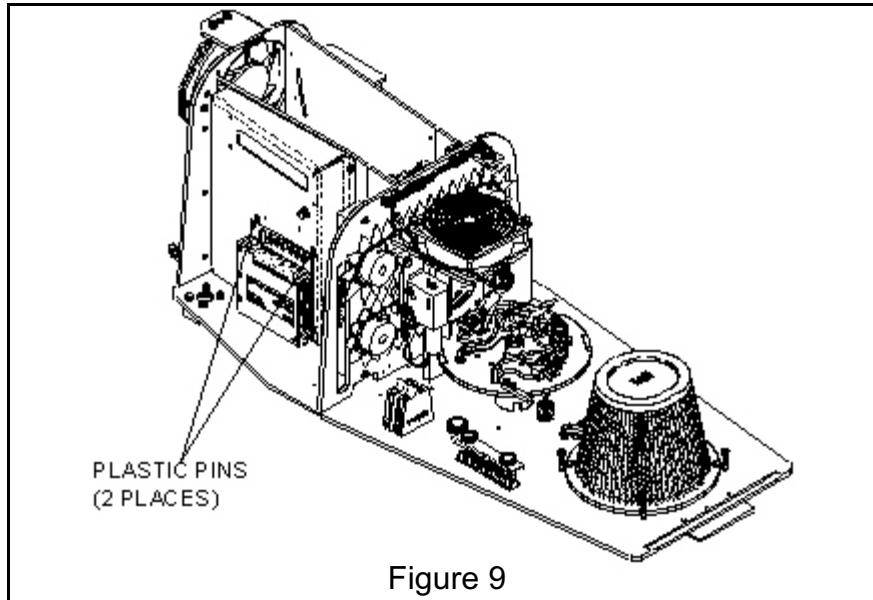


Figure 9

- c. Then lift the limiter up and out to remove it from the control module case.
- d. Place the Limiter to one side.
2. Carefully unplug the two terminal block connectors from J1 and J2 at the bottom of the control module.
3. Unscrew the four screws that hold the control module assembly to the left web assembly. These are captive screws and will remain connected to the control module (Figure 10).

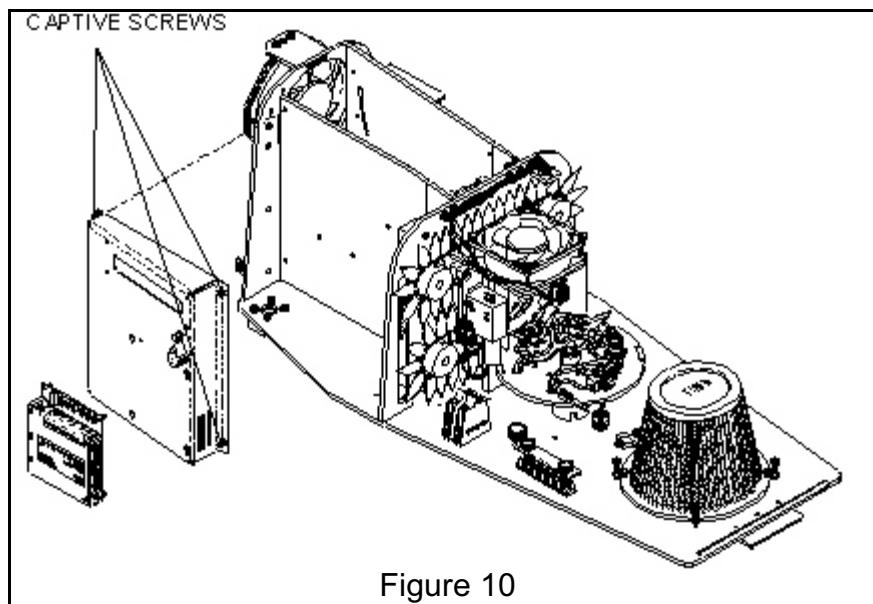


Figure 10



4. Slide the control module upwards until it is free from the rest of the HELI-PLASI 2000.

Installation:

1. Slide the back surface of the control module down the outside surface of the left web until the control module is an inch or two away from the HELI-PLASI 2000 base plate. Be careful not to pinch or entangle wires while doing this.
2. Carefully insert the two terminal block connectors into J1 and J2 at the bottom of the control module. Squeeze them firmly in place to ensure that they are fully seated along their entire length.
3. Continue sliding the control module down until it is in place, with its captive screws lined up with the matching threaded holes in the left web.
4. Screw all four mounting screws into the web. Then, tighten them.
5. Install the Voltage Limiter. The procedure is the reverse of step 1 of Removal, above.

### 3.1.2 Shutter Motors

Tools Required - Allen Wrenches 1/16", 3/32", 5/32" and needle nose pliers.

**WARNING: ENSURE THAT LINE POWER COMING IN TO THE HELI-PLASI 2000 IS TURNED OFF BEFORE REMOVING OR INSTALLING MOTORS.**

Removal:

1. Disconnect external power.
2. Remove control module. See paragraph 3.1.1.
3. Carefully unplug the terminal block connector from J1 at the bottom of the control module, and remove the blue wire from location 20 and the red wire from either location 21 (top motor) or 23 (bottom motor) and the black wire from either location 22 (top motor) or 24 (bottom motor).
4. Remove the motor wires from the wiring harness, cutting off cable ties where necessary.
5. Remove the splice from the blue wire and remove the screws retaining the missing pulse detector.
6. Rotate chain and sprocket until the master link rests on the driven sprocket.
7. Remove the retainer clip from the master link. Remove the link from the



shutter chain.

8. Remove the motor sprocket. Loosen the set screws holding the sprocket shaft to the motor shaft. Remove the motor sprocket shaft.
9. Remove the four cap screws holding the motor to the pulse generator plate.
10. Remove motor.

Installation:

1. The procedure for installing a new motor is the reverse of that for removal. A new splice will be needed to combine all four blue motor wires into one.
2. Tension the shutter chains per paragraph 3.0.2.

### 3.1.3 Lamp Changer Solenoid

Tools Required - 1/8", 9/64" Allen Wrenches and 3/8" Wrench.

**WARNING: ENSURE THAT LINE POWER COMING IN TO THE HELI-PLASI 2000 IS TURNED OFF BEFORE REMOVING OR INSTALLING SOLENOID.**

Removal:

1. Carefully unplug the terminal block connector from J2 at the bottom of the control module, and remove the black wires from locations 15 and 16.
2. Remove the two cap screws holding the solenoid block (Figure 11) to the lens mount. Retain insulators between solenoid block and lens assembly, save for reassembly

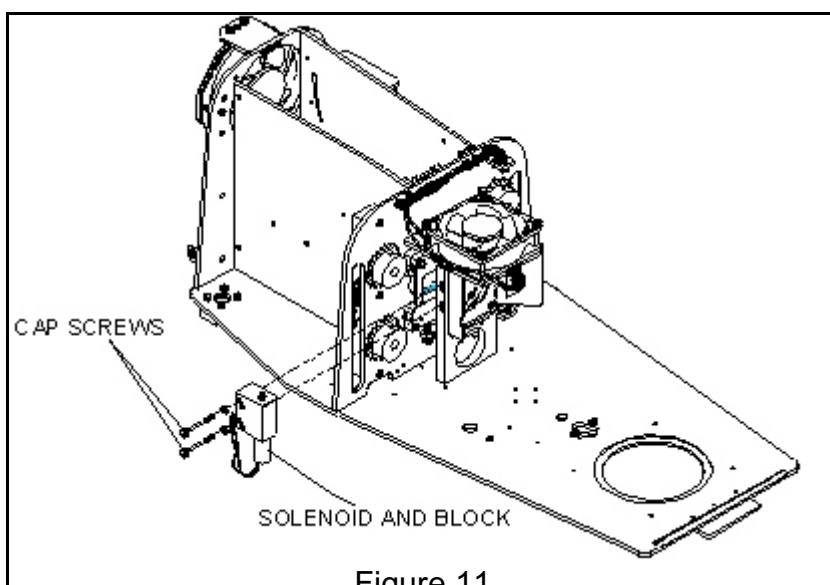


Figure 11



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 17  
10-05-2000

3. Remove the solenoid wires from the wiring harness, cutting off cable ties where necessary.
4. It is recommended that the solenoid assembly be replaced as a unit (solenoid and block)

Installation:

1. The procedure for installing a new solenoid is the reverse of that for removal. It does not matter which black wire goes in location 15 and which into location 16. Care must be given to reinstall the insulators between the solenoid block and the lens assembly.
2. Adjust the stop at the top of the solenoid to limit upward movement of the plunger to between .020" to .040" above the top surface of the lamp table (to ensure free movement of the lamp table measure clearance at 5 evenly spaced locations starting at the stop).

#### 3.1.4 Shutter Chain

Tools Required - Allen Wrenches 1/16", 3/32", 5/32" and needle nose pliers.

**WARNING: ENSURE THAT THE HELI-PLASI 2000 IS TURNED OFF AND THE CIRCUIT BREAKER DISENGAGED BEFORE REMOVING OR INSTALLING SHUTTER CHAINS.**

**CAUTION: WHEN REMOVING SHUTTER CHAIN, TAKE CARE TO AVOID DAMAGING SENSORS.**

Removal:

1. Loosen the three cap screws securing the bearing block assembly to the pulse generator plate and push block towards the center of the HELI-PLASI 2000. (Figure 12)

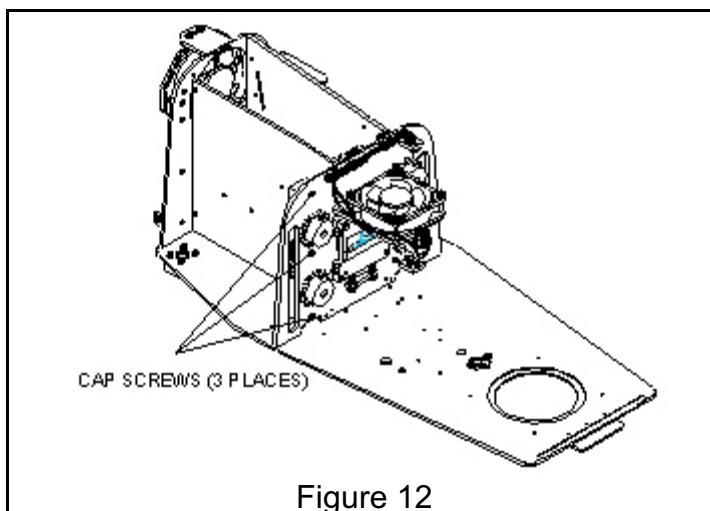


Figure 12



2. Remove the retainer clip from the master link. Remove the link from the shutter chain.
3. Pull chain out of chain guide and remove from Motor Sprocket.

Installation:

1. Install shutter chain in reverse order of removal.
2. Tension the shutter chains per paragraph 3.0.2.

### 3.2 HELI-PLASI 2000 Maintenance Tools:

1. Tilt switch and level arm adjustment - 3/8" wrench, level.
2. Adjusting leg height - 3/4" wrenches.
3. Air filter replacement - No Tools.



## **SECTION IV - TROUBLE ANALYSIS CHART**

The HELI-PLASI 2000 display panel, located inside the unit in the left front corner, will usually give a message pointing to the fault which caused it to shut down (Figure 13). Use the troubleshooting chart to determine which actions to take when the HELI-PLASI 2000 shuts down. In every case, if the recommended actions do not solve the problem, the control module could be at fault.

### **TROUBLE ANALYSIS CHART**

<u>MESSAGE</u>	<u>PROBABLE CAUSE</u>
No Message	The control module is not operating properly. Check power source. Check switches and circuit breaker. Replace control module.
WARMING UP	The temperature of the HELI-PLASI 2000 is less than 32 degrees F. If the power to the HELI-PLASI 2000 unit has been only recently applied, this is normal and the HELI-PLASI 2000 will warm up in a few minutes. If the HELI-PLASI 2000 is clearly warmer than -36 degrees F, check the thermal sensor assembly that is mounted on the aluminum plate near the motors. If the HELI-PLASI 2000 is less than 32 degrees F, but does not warm up, check the heaters.
CHECK CIRC FAN	The thermal sensor assembly that is mounted on the circulating fan is greater than 250 degrees F. Check the circulating fan. Check the Exhaust Fan. Check the Air Filter. Check the Thermal Sensor Assembly.
ALL LAMPS OUT	The lamp table is signaling last lamp (table is in position 4) and the lamp is drawing no current. Replace burned out lamps. Check lamp table wiring. Check lamp table switches.
TOP CHAIN FAULT	The missing pulse detector on the top chain is not signaling. Check top chain for binding or obstructions. Check tightness of chain sprocket set screws. Check top chain motor. Check top chain motor wiring. Check slotted sensor on top chain.
BOT CHAIN FAULT	The missing pulse detector on the bottom chain is not signaling. Check bottom chain for binding or obstructions. Check tightness of chain sprocket set screws. Check bottom chain motor. Check bottom chain motor wiring. Check slotted sensor on bottom chain.



TILT HIGH	The leveling arm sensor is open. Check alignment of the HELI-PLASI 2000. Check wiring to the tilt sensors. Check the mercury switch in the tilt sensor.
TILT LOW	The leveling arm sensor is open. Check alignment of the HELI-PLASI 2000. Check wiring to the tilt sensors. Check the mercury switch in the tilt sensor.
OVERTEMPERATURE	The temperature of the air inside the control module is greater than 176 degrees F. Check exhaust fan. Check air filter. Check for obstructions to air flow.
LINE OVERVOLTAGE	The voltage on the power line into the HELI-PLASI 2000 is greater than 135VRMS. Check power source. Check wiring.
SOLENOID FAULT	The control module has tried to fire the solenoid 12 times without seeing any lamp current nor the last lamp signal. Check solenoid. Check lamp table wiring. Check lamp table switches. Check lamp table for binding. Check cable reel for proper cable tension.
LOW LINE FAULT	The voltage on the power line into the HELI-PLASI 2000 is less than 96VRMS. Check power source. Check wiring.
LIMITER FAULT	The line voltage is okay, the lamp has been on for more than 1 second, and the limiter voltage out to the lamp is less than 30VRMS. Check Voltage Limiter. Check wiring to limiter and to lamp table.



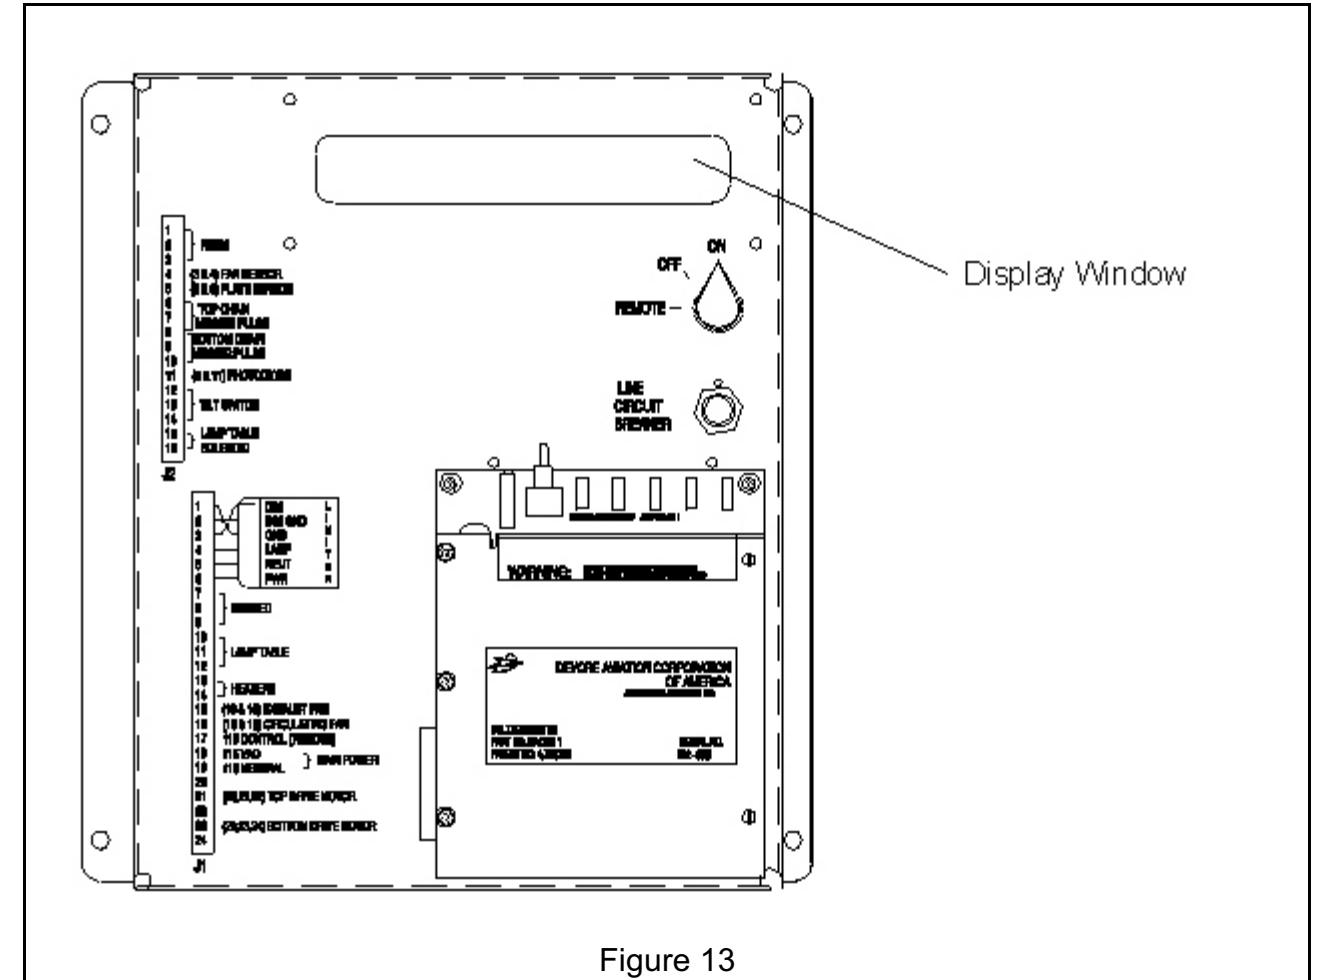


Figure 13



# DEVORE AVIATION CORPORATION

ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 22  
10-05-2000

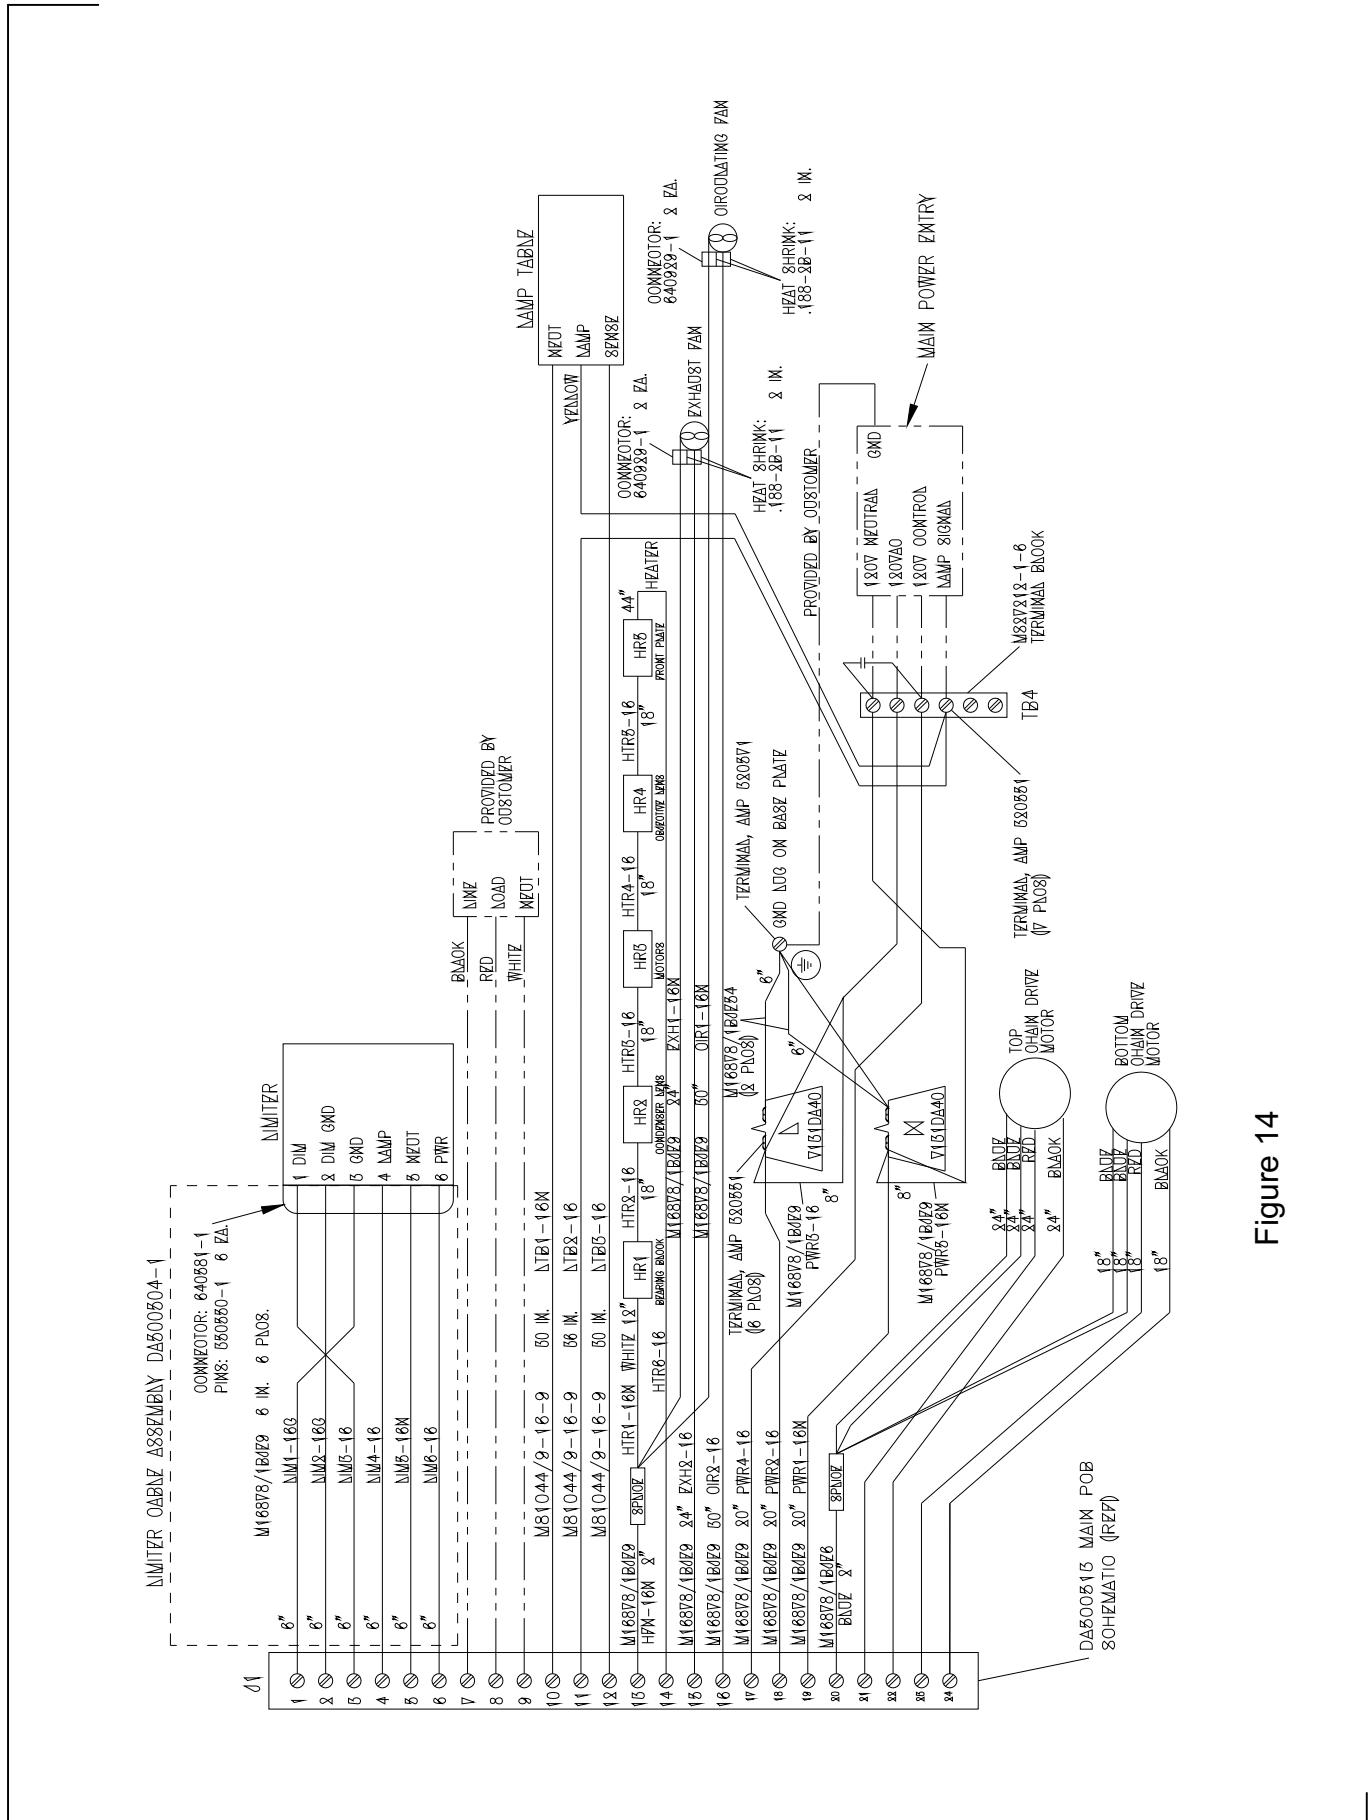


Figure 14



DEVORE AVIATION CORPORATION  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 23  
10-05-2000

18 WIRING DIAGRAM

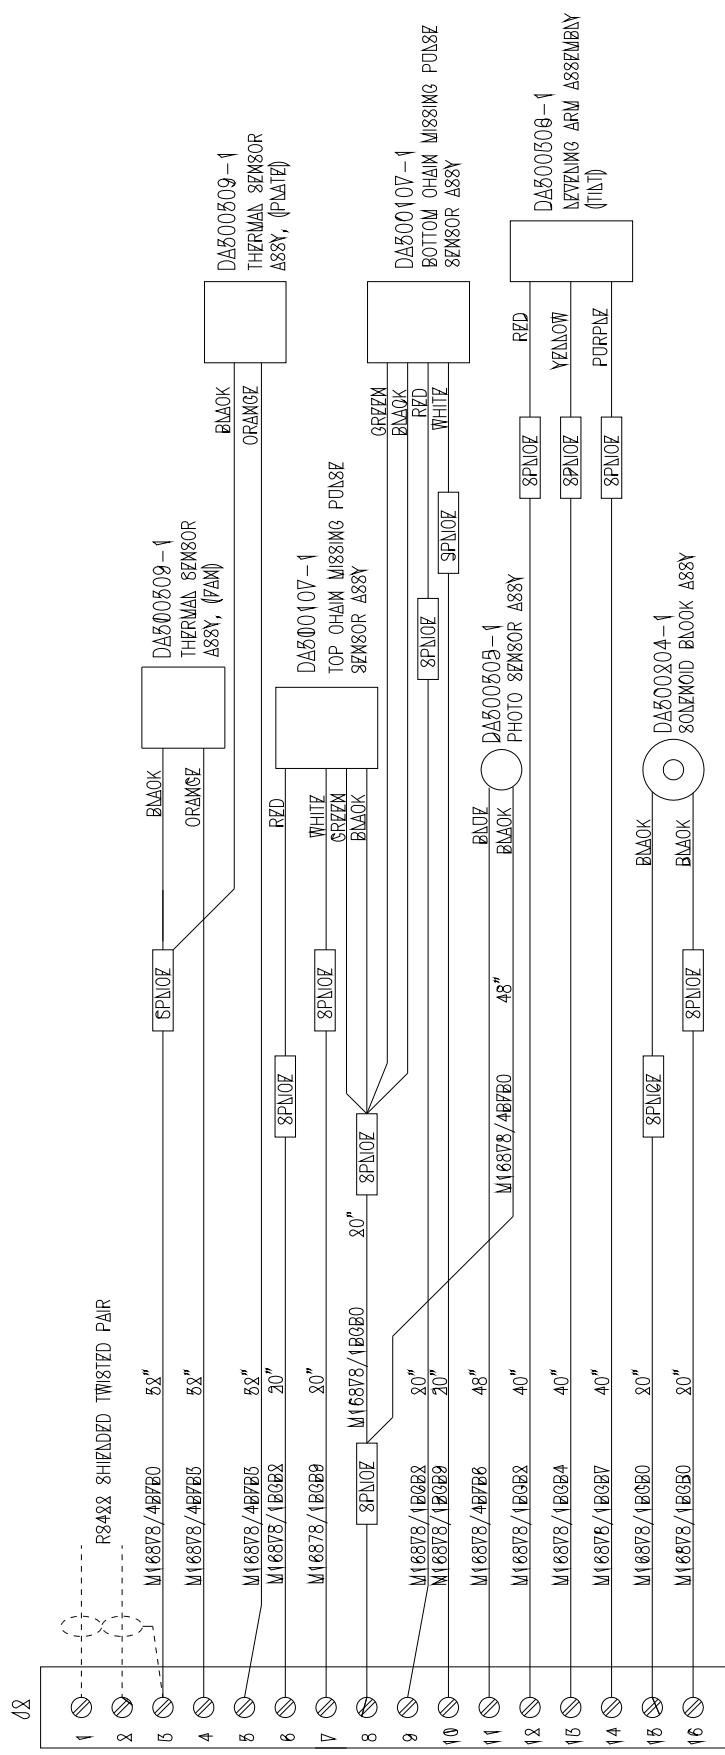


Figure 15



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 24  
10-05-2000

## SECTION V - HELI-PLASI 2000 ILLUSTRATED PARTS LIST

### INTRODUCTION

This illustrated parts manual is designed to permit identification of replacement parts, when necessary, for the HELI-PLASI 2000. Parts lists identification will include the following breakdown information:

1. Item Number column identifies the individual part with its corresponding illustration.
2. Part Number column identifies the DeVore Aviation Corporation of America part number, AN, MS, NAS, or commercial part numbers used as original or replacement equipment.
3. Description column lists the functional name of the identified part. The name is used when placing an order for replacement parts.
4. Quantity column provides the total requirements of each individual part for noted assembly and subassembly.

IPL Figure 9 Bearing Block Assembly			
Item Number	Part Number	Description	Quantity
-	DA500109-1	BEARING BLOCK ASSEMBLY	-
1	DA500114-11	BEARING BLOCK, PULSE GENERATOR	1
2	DA500115-11	SHAFT, DRIVEN, PASSIVATED	2
3	DA1455-1	BEARING (SEE DRAWING FOR PART NUMBERS AVAIL.)	4
4	CS-10	COLLAR	2
5	620-10	RESISTOR, 10 OHM 30W 5% BY RCD TYPE 620	1

#### \*\*\*\*NOTE\*\*\*\*

DO NOT USE THIS MANUAL FOR ANY PURPOSE EXCEPT FOR ITS INTENDED USE AS A PARTS REPLACEMENT CATALOG. MANUFACTURER SPECIFICATIONS, RATINGS, AND REPAIR PROCEDURES CAN BE FOUND IN THE HELI-PLASI SERVICE AND MAINTENANCE SECTIONS OF THIS MANUAL.



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 25  
10-05-2000

Note: When ordering replacement components or assemblies, be sure that the mounting hardware for the installation corresponds to the next higher assembly or installation procedure requirements.

DeVore Aviation Corporation of America reserves the right to change or cancel any assemblies, assembly components, parts lists, or illustrations represented here without prior notice. It further reserves the right to substitute components whenever such substitution does not interfere with the functional operation of the HELI-PLASI 2000.




**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 26  
10-05-2000

IPL Figure 1 HELI-PLASI 2000 Assembly

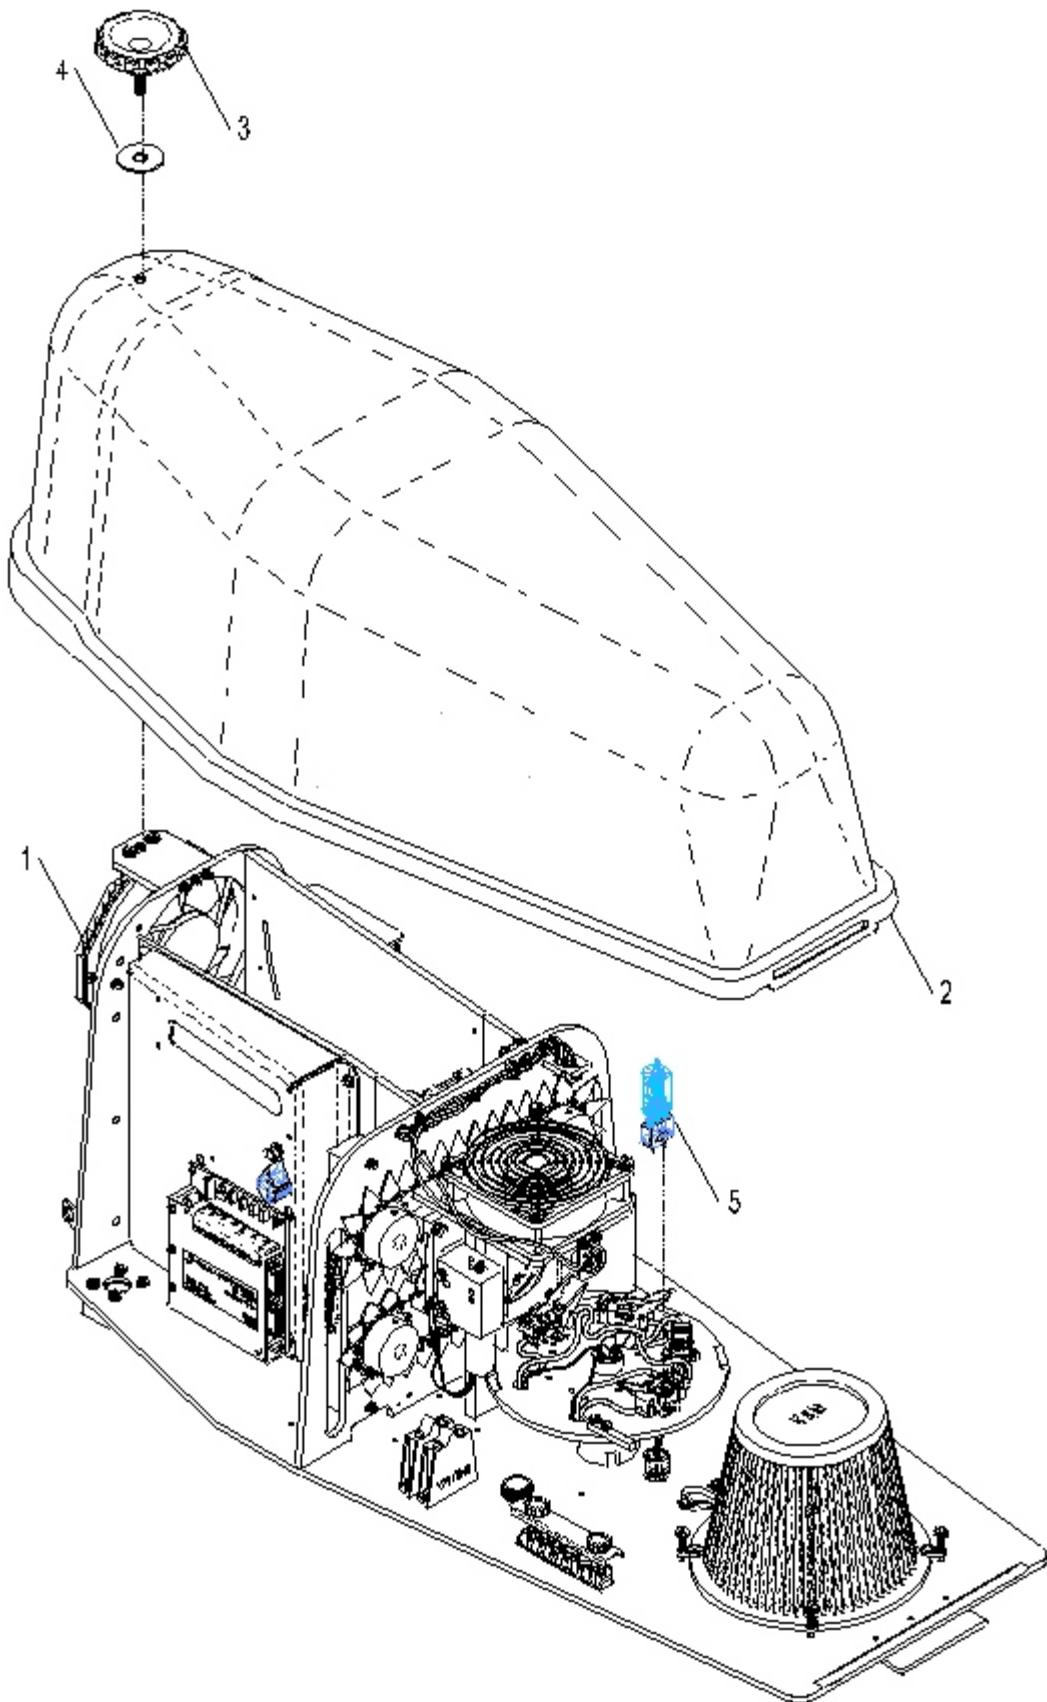

**DeVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 27  
10-05-2000

**IPL Figure 1 HELI-PLASI 2000 Assembly**

Item Number	Part Number	Description	Quantity
-	DA500100-3	HELI-PLASI (60Hz)	-
-	DA500100-4	HELI-PLASI (50Hz)	-
1	DA500102-3	PULSE GENERATOR ASSEMBLY, HELI (60 HZ)	1
	DA500102-4	PULSE GENERATOR ASSEMBLY, HELI (50 HZ)	1
2	DA500609-1	COMPOSITE SHELL ASSEMBLY	1
3	DA500147-11	RETAINING KNOB	1
4	DA500147-13	WASHER, SEALING	1
5	BVA	ANSI# BVA LAMP, 900W, 120V, TUNGSTEN HALOGEN	4




**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 28  
10-05-2000

IPL Figure 2 Pulse Generator Assembly

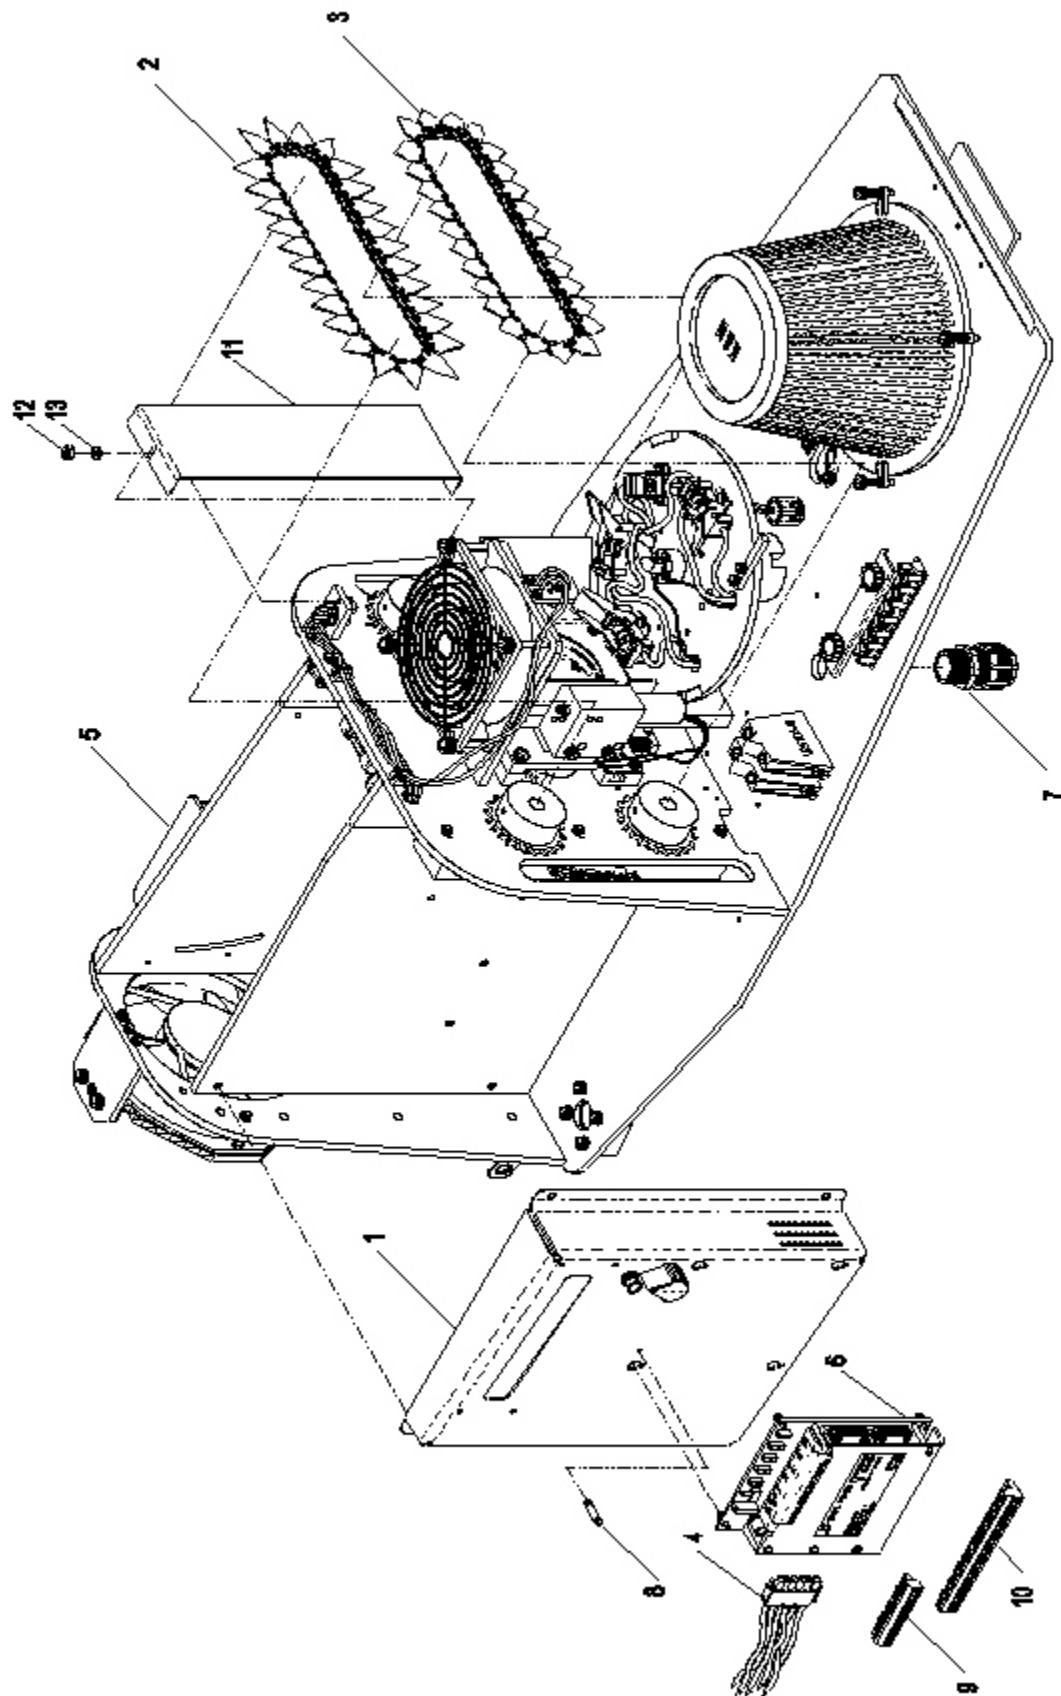

**DeVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 29  
10-05-2000

## IPL Figure 2 Pulse Generator Assembly


Item Number	Part Number	Description	Quantity
-	DA500102-3	PULSE GENERATOR ASSEMBLY (60 Hz)	-
-	DA500102-4	PULSE GENERATOR ASSEMBLY (50 Hz)	-
1	DA500507-1	CONTROL MODULE (60 HZ)	1
	DA500507-3	CONTROL MODULE (50 HZ)	1
2	DA500720-5	SHUTTER CHAIN ASSEMBLY (UPPER)	1
3	DA500720-1	SHUTTER CHAIN ASSEMBLY (LOWER)	1
4	DA500504-3	LIMITER CABLE ASSEMBLY	1
5	DA500103-1	MAIN GENERATOR ASSEMBLY (60 Hz)	1
	DA500103-3	MAIN GENERATOR ASSEMBLY (50Hz)	1
6	DA1293-1	LIMITER II ASSEMBLY	1
7	2932NM	CORD CONNECTOR	2
8	27MSP00625	5-8 PCB SUPPORT	2
9	1803714	PLUG 0.15, 16 PIN, COMBICON	1
10	1757239	PLUG 0.2, 24 PIN, COMBICON	1
11	DA500153-11	SHIELD PLATE	1
12	HNL4-40C	NUT, 4-40, STAINLESS STEEL	2
13	WA-4-C	WASHER, #4, THICK, STAINLESS STEEL	2



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 30  
10-05-2000

IPL Figure 3 Main Generator Assembly

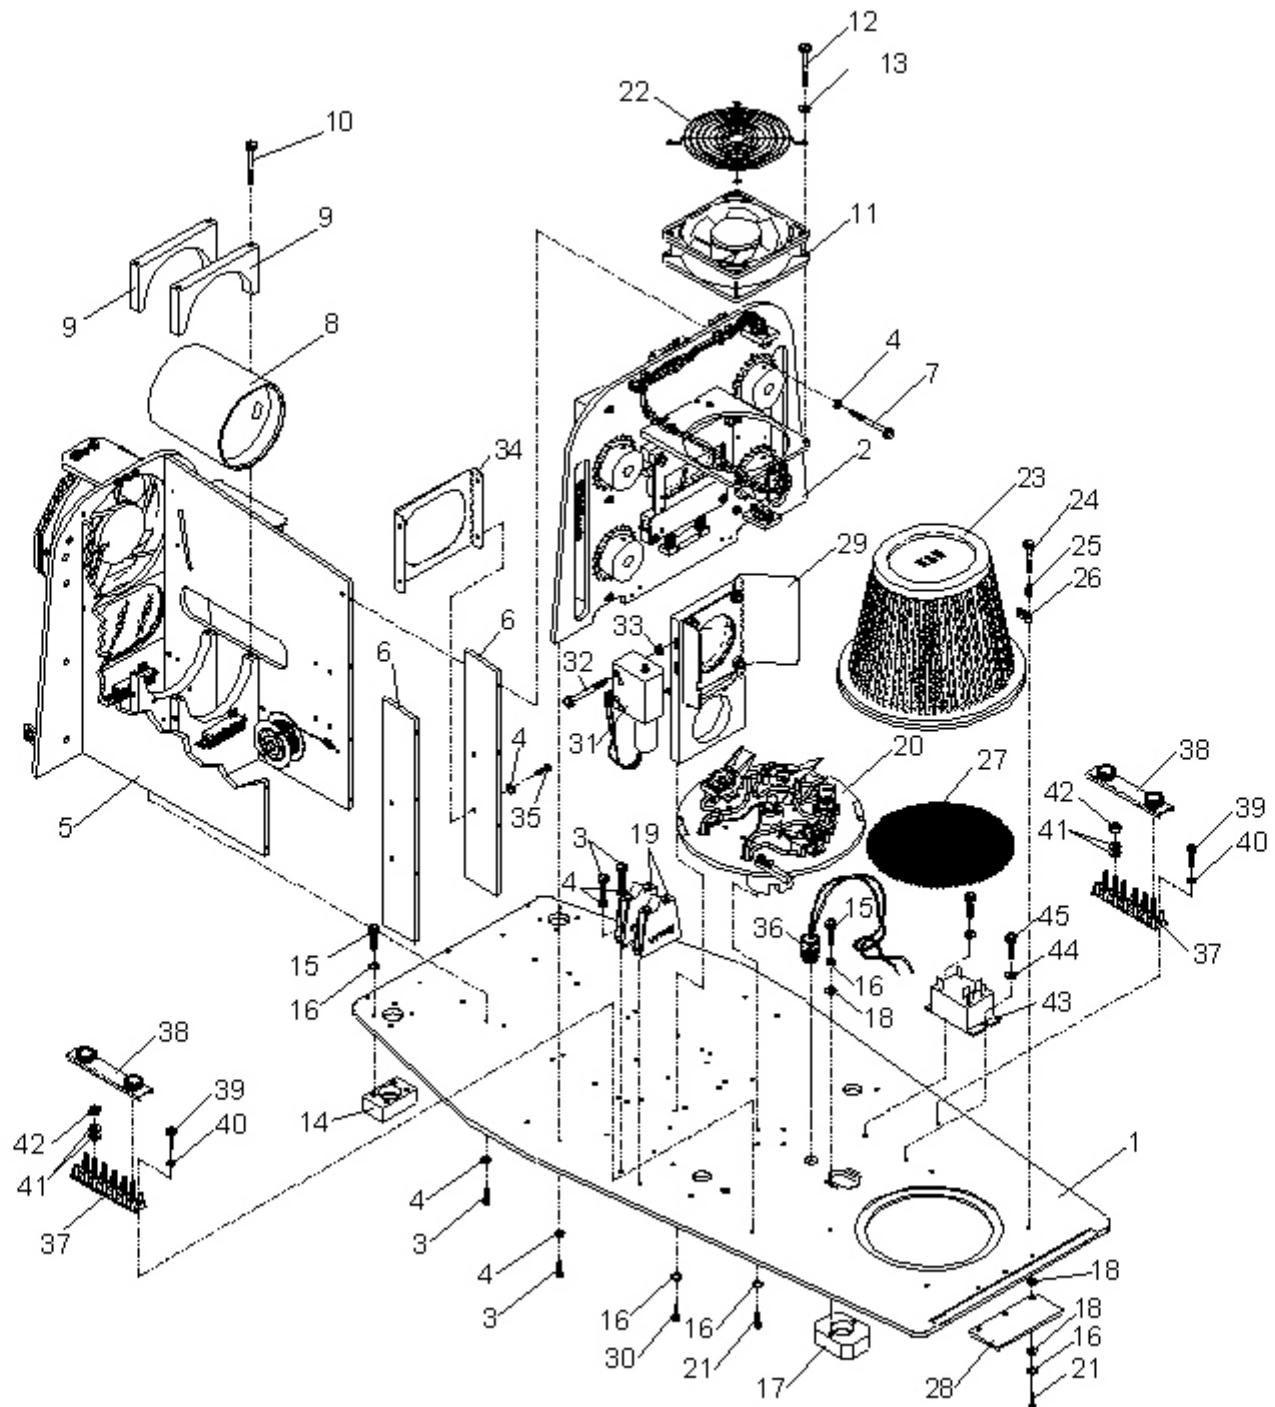

**DeVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 31  
10-05-2000

### IPL Figure 3 Main Generator Assembly

Item Number	Part Number	Description	Quantity
-	DA500103-1	MAIN GENERATOR ASSEMBLY (60 Hz)	-
-	DA500103-3	MAIN GENERATOR ASSEMBLY (50 Hz)	
1	DA500112-11	BASE PLATE	1
2	DA500104-1	GENERATOR PLATE ASSEMBLY (60HZ)	1
	DA500104-3	GENERATOR PLATE ASSEMBLY (50HZ)	1
3	SHCS6-32X.50C	SOCKET HEAD SCREW , 6-32 X 1/2, SS	26
4	WA-6-SLC	WASHER, #6, SPLIT LOCK, STAINLESS STEEL	44
5	DA500142-1	WEB ASSEMBLY	1
6	DA500127-11	SPACER (STANDARD SIGNAL)	2
7	SHCS6-32X2.50C	SOCKET HEAD CAP SCREW , 6-32 X 2 1/2, SS	6
8	113-070	PROJECTOR LENS	1
9	DA500121-13	LENS CLAMP	2
10	SHCS6-32X2.00C	SOCKET HEAD CAP SCREW , 6-32 X 2.0, SS	4
11	DA1423-1	CIRCULATION FAN	1
12	SHCS6-32X1.75C	SOCKET HEAD SCREW , 6-32 X 1 3/4, SS	4
13	WA-6-LC	WASHER, #6, THIN, STAINLESS STEEL	4
14	DA500130-1	LATCH BLOCK ASSEMBLY	2
15	SHCS10-32X.875C	SOCKET HEAD CAP SCREW , 10-32 X 7/8, SS	10




**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 32  
10-05-2000

**IPL Figure 3 Main Generator Assembly**

Item Number	Part Number	Description	Quantity
16	WA-10-SLC	WASHER, #10, SPLIT LOCK, STAINLESS STEEL	20
17	DA500126-1	FOOT ASSY, REAR	1
18	WA-10-LC	WASHER, #10, THIN, STAINLESS STEEL	9
19	V131DA40	VARISTOR	2
20	DA500201-1	LAMP CHANGER ASSEMBLY	1
21	SHCS10-32X.75C	SOCKET HEAD SCREW STAINLESS	7
22	08170	FINGER GUARD, COMAIR MUFFIN FAN, MD24B2	1
23	DA500157-1	AIR FILTER ASSEMBLY	1
24	9X25-0624	SHOULDER BOLT	4
25	C0240-020-0880S	SPRING	4
26	L-5507	RETAINER	4
27	DA500152-11	SCREEN, FILTER	1
28	DA500150-11	TANG, SHELL RETAINER	1
29	DA500106-1	ASPHERIC CONDENSER LENS ASSEMBLY	1
30	SHCS10-32X.50C	SOCKET HEAD CAP SCREW, 10-32 X 1/2, SS	2
31	DA500204-1	SOLENOID BLOCK ASSEMBLY	1
32	SHCS8-32X1.25C	SOCKET HEAD CAP SCREW, 8-32 X 1 1/4, SS	2
33	00003007-1	WASHER	2

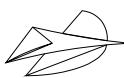

**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 33  
10-05-2000

### **IPL Figure 3 Main Generator Assembly**


Item Number	Part Number	Description	Quantity
34	DA500151-11	BAFFLE	3
35	SHCS6-32X.25C	SOCKET HEAD CAP SCREW, 6-32 X 1/4, SS	12
36	DA500505-1	PHOTO SENSOR ASSEMBLY	1
37	MS27212-1-6	MS TERMINAL BLOCK	2
38	MS18029-1S-6	MS COVER	2
39	SHCS4-40X.375C	SOCKET HEAD CAP SCREW, 4-40 X 3/8, SS	4
40	WA-4-SLC	WASHER, #4, SPLIT LOCK, STAINLESS STEEL	4
41	WA-6-C	WASHER, #6, THICK, STAINLESS STEEL	24
42	MS21083N06	MS NUT	12
43	T92S7A22-120	RELAY	1
44	WA-8-SLC	WASHER, #8, SPLIT LOCK, STAINLESS STEEL	2
45	SHCS8-32X.375C	SOCKET HEAD CAP SCREW, 8-32 X 3/8, SS	2



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 34  
10-05-2000

IPL Figure 4 Lamp Changer Assembly

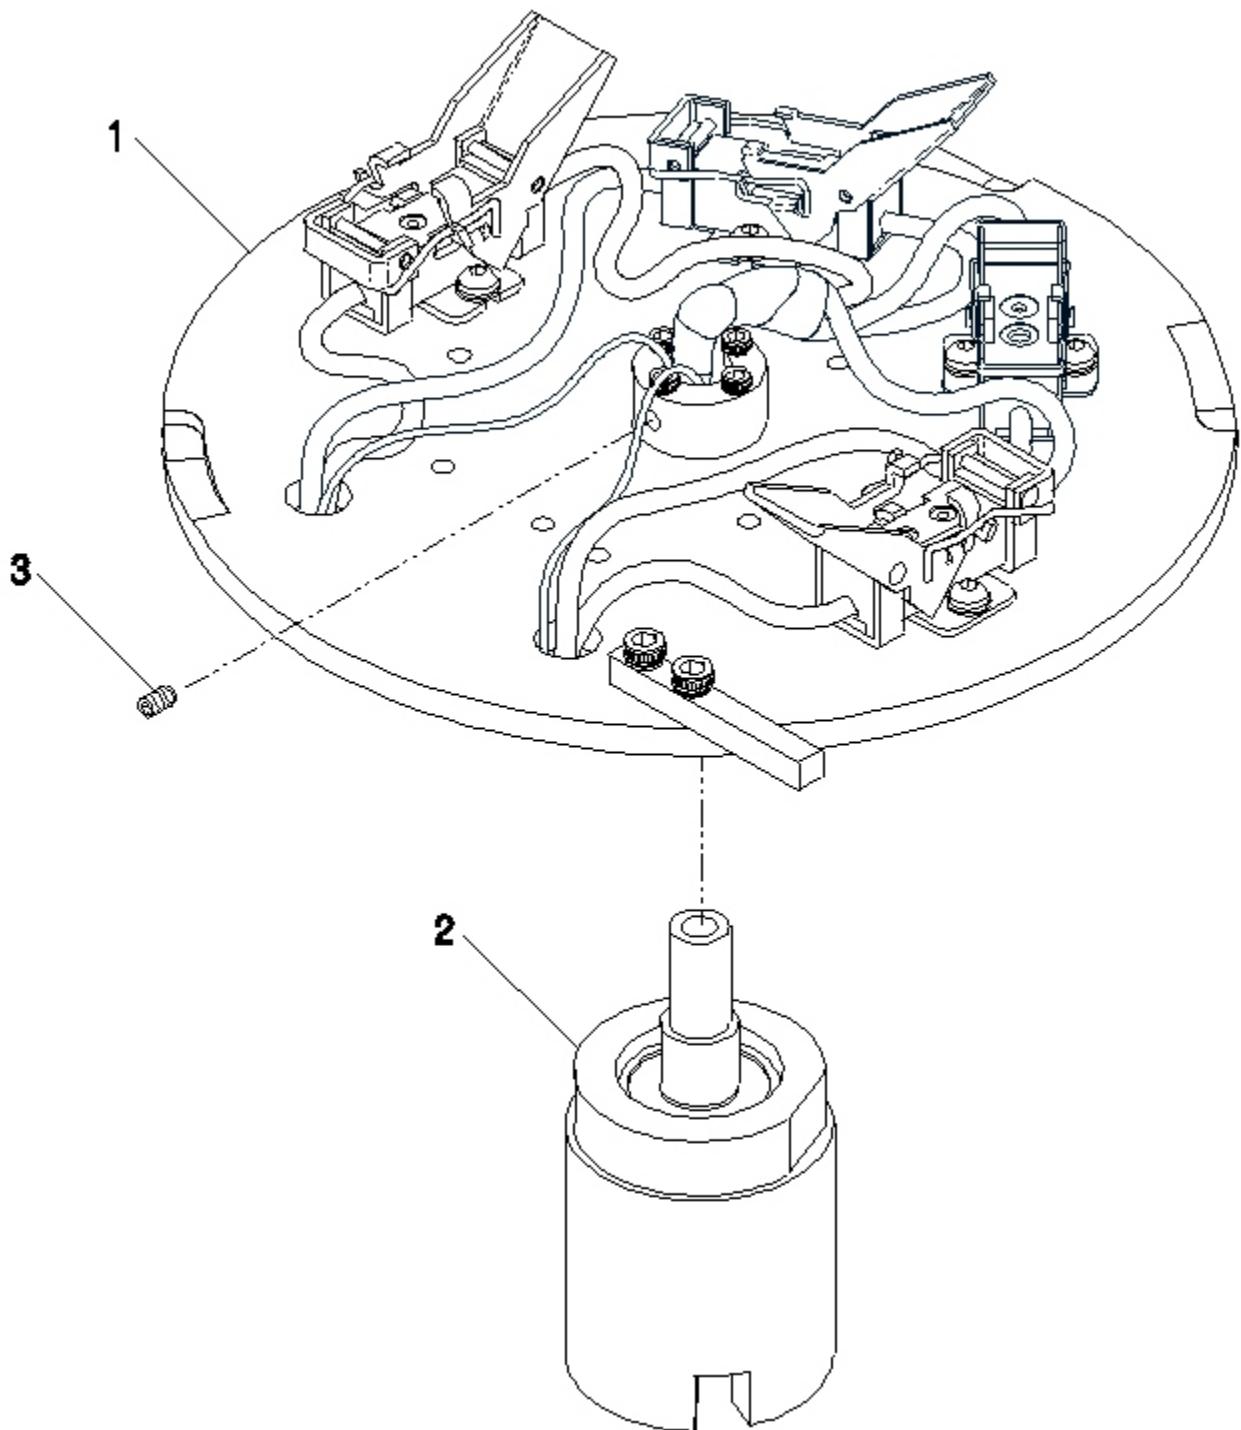

**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 35  
10-05-2000

## IPL Figure 4 Lamp Changer Assembly

Item Number	Part Number	Description	Quantity
-	DA500201-1	LAMP CHANGER ASSEMBLY	-
1	DA500202-1	LAMP TABLE ASSEMBLY	1
2	DA500203-1	PEDESTAL ASSEMBLY, LAMP TABLE	1
3	SS6-32X.187C	SCREW STAINLESS STEEL SOCKET SET HEX DRIVE	1




**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 36  
10-05-2000

IPL Figure 5 Lamp Table Assembly

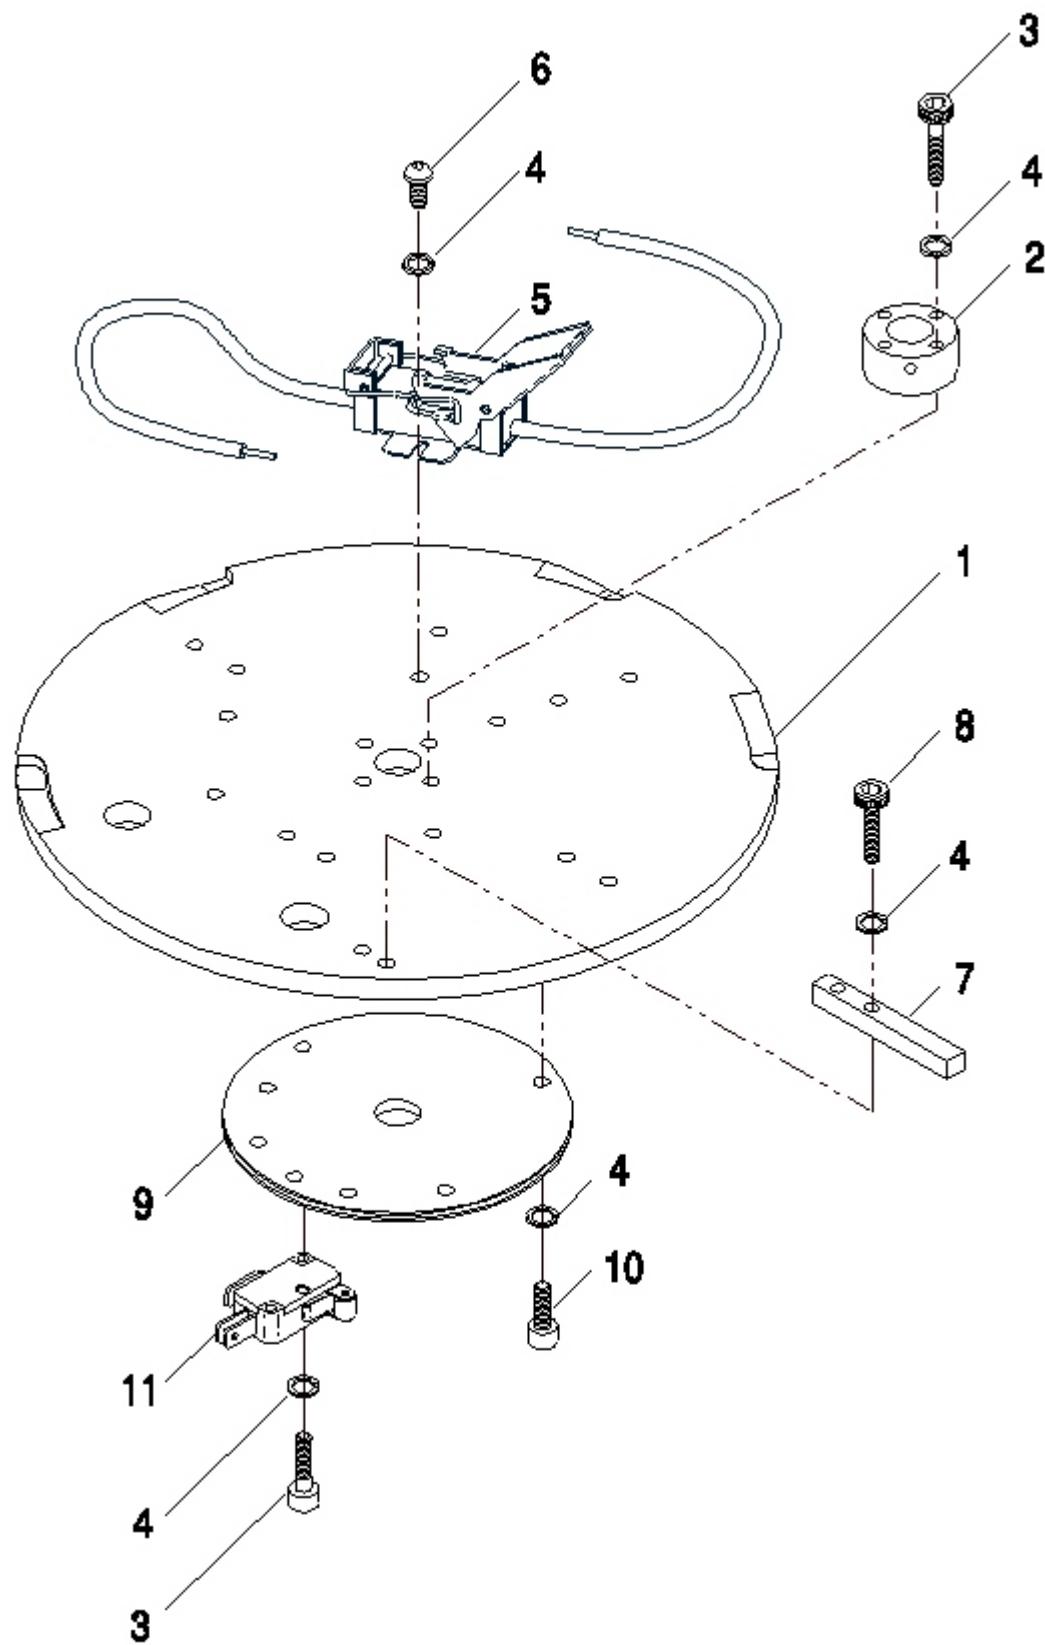

**DeVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 37  
10-05-2000

## IPL Figure 5 Lamp Table Assembly

Item Number	Part Number	Description	Quantity
-	DA500202-1	LAMP TABLE ASSEMBLY	-
1	DA500210-11	LAMP TABLE	1
2	DA500212-11	HUB, LAMP TABLE	1
3	SHCS4-40X.75C	SOCKET HEAD CAP SCREW, 4-40 X 3/4, SS	10
4	WA-4-SLC	WASHER STAINLESS STEEL, SPLIT LOCK	21
5	DA1410-1	SOCKET	4
6	SBHC4-40X.25C	SOCKET BUTTON HEAD SCREW, 4-40 X 1/4, SS	7
7	DA500215-11	STOP, LAMP TABLE	1
8	SHCS4-40X.50C	SOCKET HEAD CAP SCREW, 4-40 X 1/2, SS	3
9	DA500211-11	DRIVE WHEEL, LAMP TABLE	1
10	SHCS4-40X.375C	SOCKET HEAD CAP SCREW, 4-40 X 3/8, SS	1
11	V3L-139-D9	MICRO SWITCH W-SPADE LUGS (BY HONEYWELL)	3




**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 38  
10-05-2000

**IPL Figure 6 Lamp Table Pedestal Assembly**

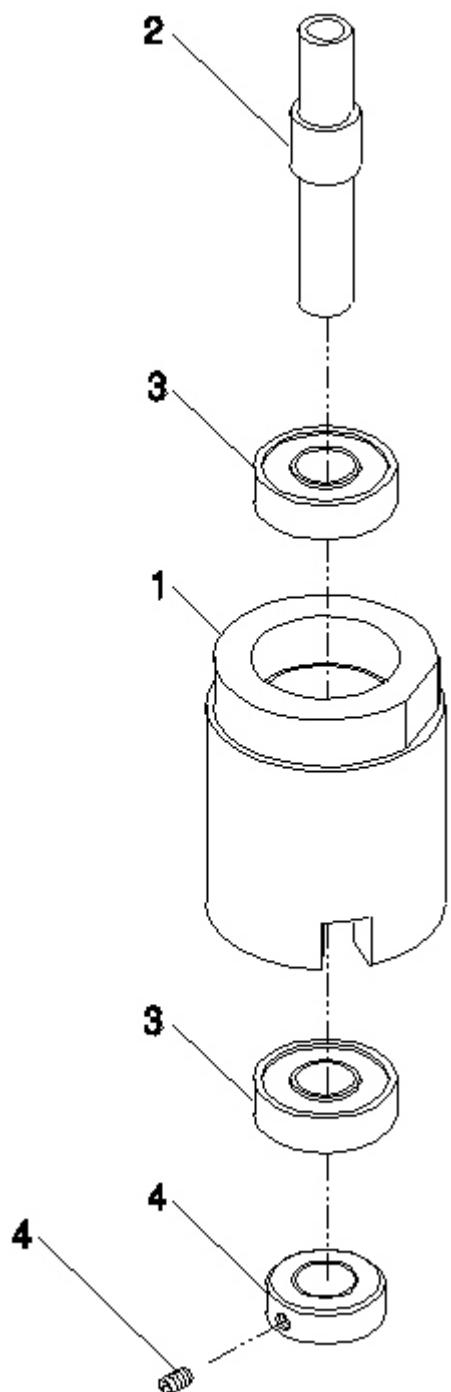

**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 39  
10-05-2000

## IPL Figure 6 Lamp Table Pedestal Assembly

Item Number	Part Number	Description	Quantity
-	DA500203-1	LAMP TABLE PEDESTAL ASSEMBLY	-
1	DA500213-11	PEDESTAL, LAMP TABLE	1
2	DA500115-11	SHAFT, DRIVEN, PASSIVATED	1
3	DA1455-1	BEARING (SEE DRAWING FOR PART NUMBERS AVAIL.)	2
4	CS-10	COLLAR	1




**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 40  
10-05-2000

## IPL Figure 7 Web Assembly

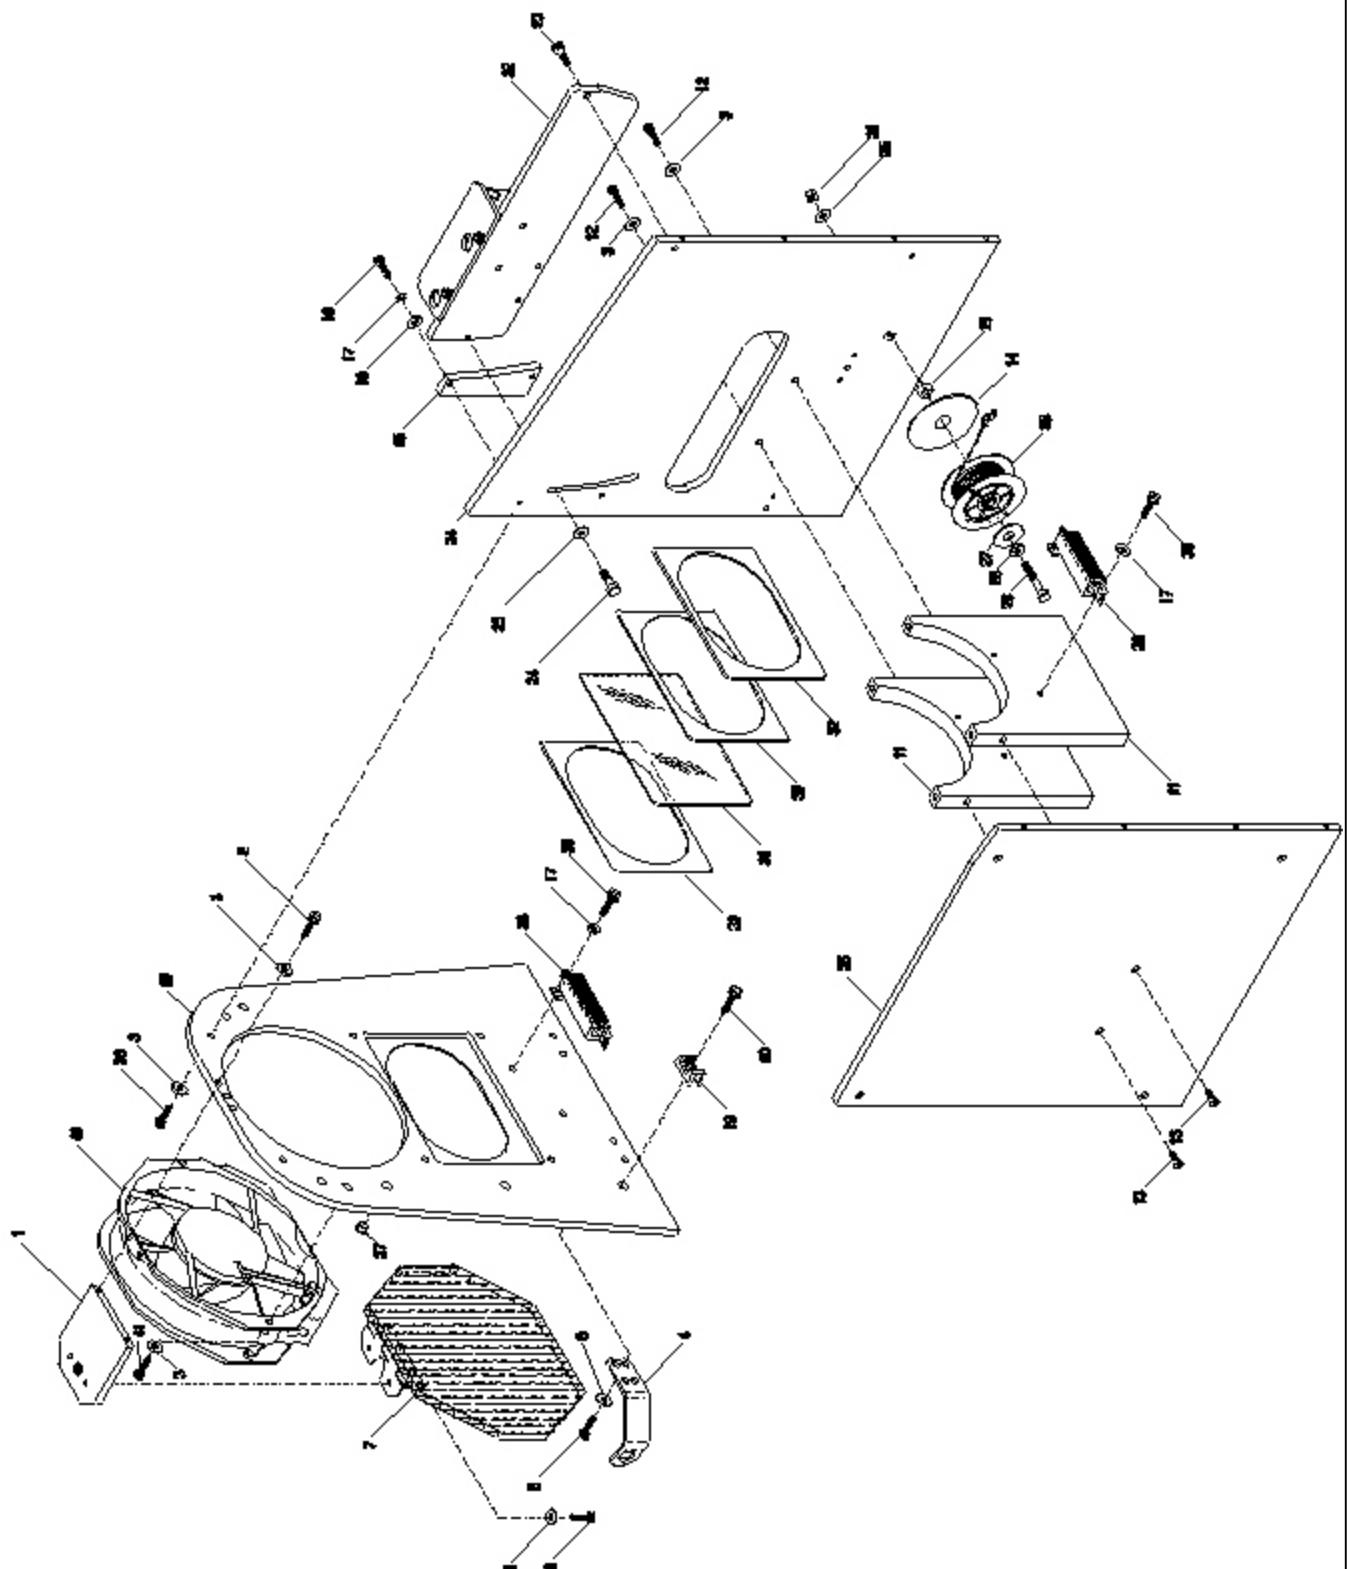

**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 41  
10-05-2000

## IPL Figure 7 Web Assembly

Item Number	Part Number	Description	Quantity
-	DA500142-1	WEB ASSEMBLY	-
1	DA500145-11	SUPPORT PLATE	1
2	SHCS6-32X.625C	SOCKET HEAD CAP SCREW, 6-32 X 5/8, SS	3
3	WA-6-SLC	WASHER, #6, SPLIT LOCK, STAINLESS STEEL	14
4	DA500146-11	LATCH BRACKET	2
5	SBHC8-32X.375C	SOCKET BUTTON HEAD SCREW, 8-32 X 3/8, SS	4
6	WA-8-SLC	WASHER, #8, SPLIT LOCK, STAINLESS STEEL	4
7	DA500148-1	FLAPPER DOOR ASSEMBLY	1
8	SBHC6-32X.25C	SOCKET BUTTON HEAD SCREW, 6-32 X 1/4, SS	2
9	WA-6-C	WASHER, #6, THICK, STAINLESS STEEL	2
10	DA500111-11	WINDOW SUPPORT	1
11	DA500121-11	LENS SUPPORT	2
12	SHCS6-32X.50C	SOCKET HEAD CAP SCREW, 6-32 X 1/2, SS	2
13	SFHC6-32X.50C	SOCKET FLAT HEAD SCREW, 6-32 X 1/2, SS	2
14	FMG41021-11	WASHER, TEFLON .70 DIA	1
15	DA500316-11	VERNIER BLOCK	1
16	SBHC4-40X.50C	SOCKET BUTTON HEAD SCREW, 4-40 X 1/2, SS	2
17	WA-4-SLC	WASHER, #4, SPLIT LOCK, STAINLESS STEEL	6



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 42  
10-05-2000

## IPL Figure 7 Web Assembly

Item Number	Part Number	Description	Quantity
18	WA-4-LC	WASHER, #4, THIN, STAINLESS STEEL	2
19	TM1S4-M	CABLE TIE MOUNT	7
20	SBHC4-40X.25C	SOCKET BUTTON HEAD SCREW, 4-40 X 1/4, SS	7
21	FMG41020-13	BLOCK, REEL (.225 THICK)	1
22	DA500306-1	LEVELING ARM ASSEMBLY	1
23	9X25-0608	SHOULDER BOLT	1
24	AN3-4A	AN BOLT	1
25	WA-10-C	WASHER, #10, THICK, STAINLESS STEEL	2
26	DA500208-1	REEL ASSEMBLY	1
27	FMG41021-13	WASHER, TEFLON .70 DIA	1
28	AN970-3	AN WASHER	1
29	AN3-14A	AN BOLT	1
30	MS21083N3	MS NUT	1
31	DA500136-11	WINDOW GLASS	1
32	DA500135-13	CLAMP PLATE	1
33	DA500135-11	GASKET, WINDOW FROM 1-32(0.32") THK. MATERIAL	2
34	DA500110-13	SUPPORT WEB	1
35	DA500110-11	SUPPORT WEB	1



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 43  
10-05-2000

## IPL Figure 7 Web Assembly

Item Number	Part Number	Description	Quantity
36	SBHC6-32X.50C	SOCKET BUTTON HEAD SCREW, 6-32 X 1/2, SS	7
37	9305K21	BUSHING BUMPER, RUBBER, FLAT TOP	3
38	620-10	RESISTOR, 10 OHM 30W 5% BY RCD TYPE 620	2
39	SHCS4-40X.375C	SOCKET HEAD CAP SCREW, 4-40 X 3/8, SS	4
40	DA1422-1	EXHAUST FAN	1
41	SHCS6-32X.75C	SOCKET HEAD CAP SCREW, 6-32 X 3/4, SS	2




**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 44  
10-05-2000

---

IPL Figure 8 Generator Plate Assembly

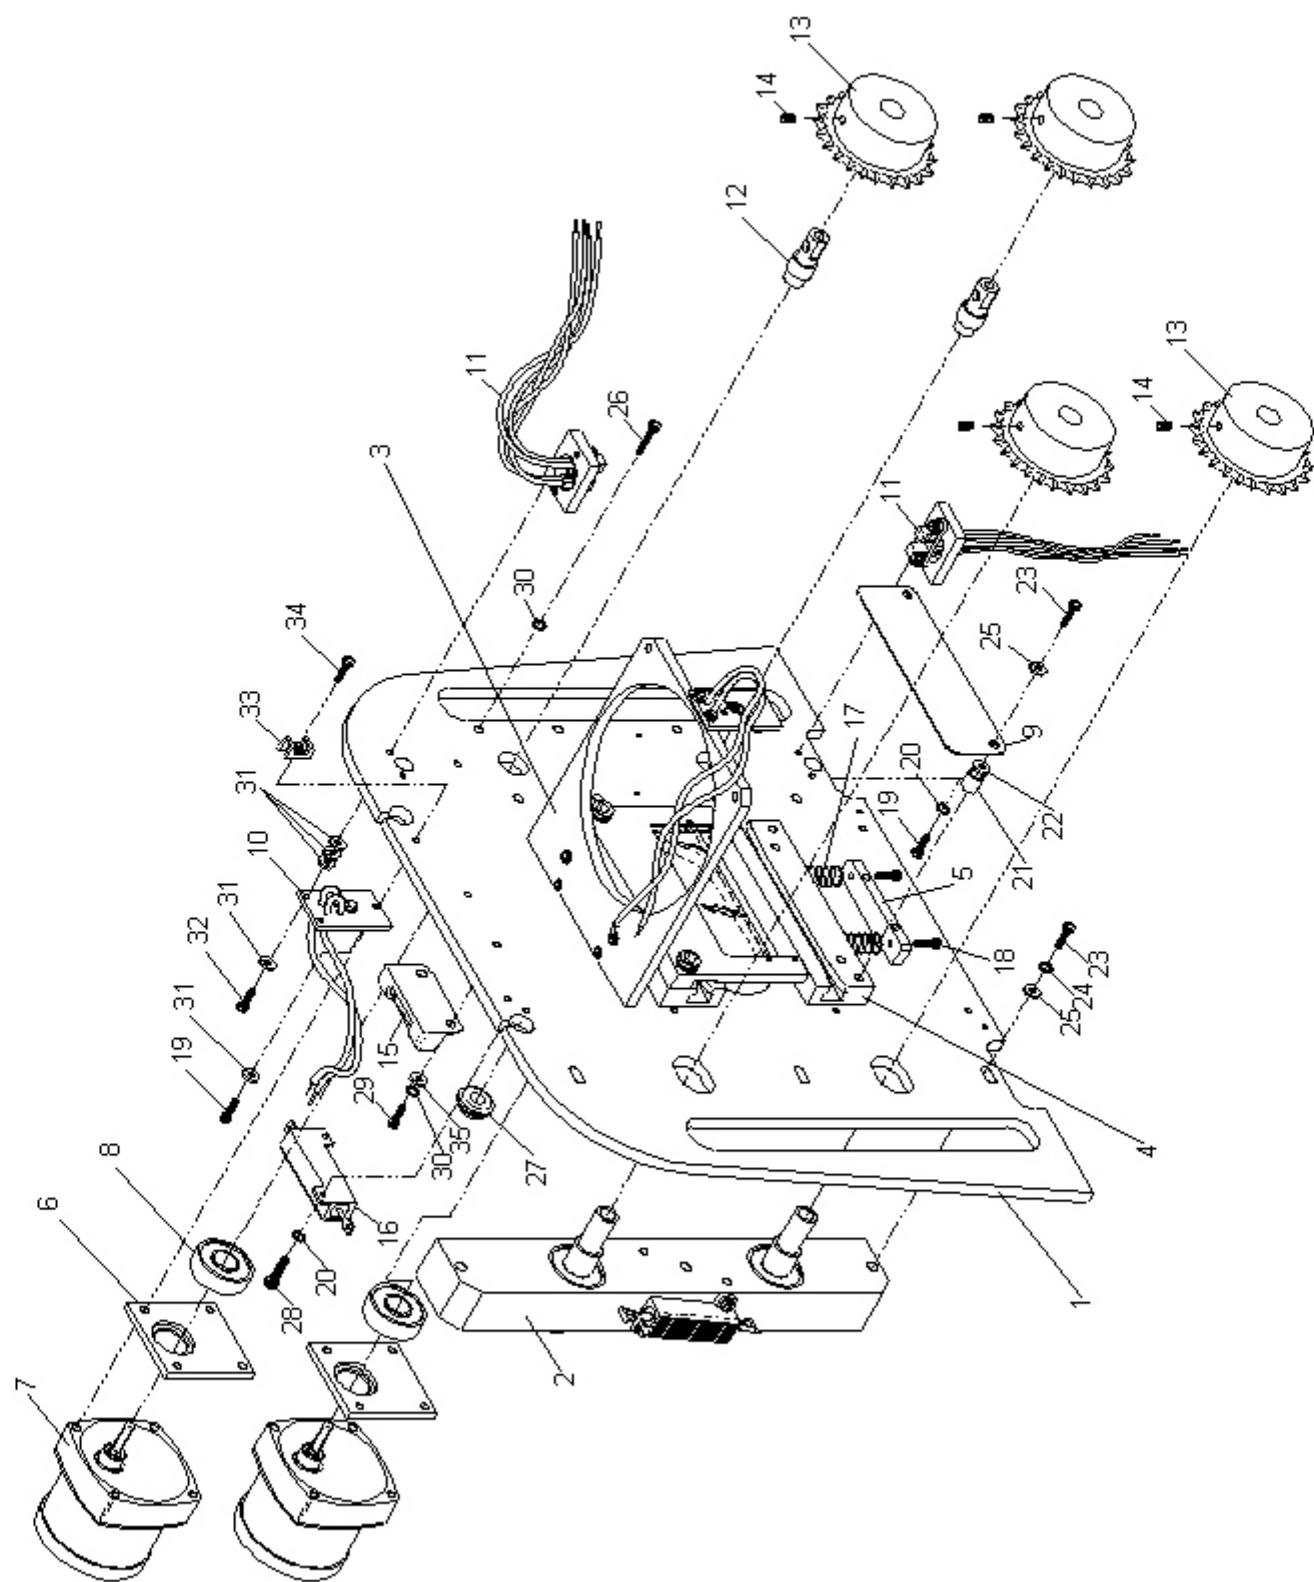

**DeVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 45  
10-05-2000

**IPL Figure 8 Generator Plate Assembly**

Item Number	Part Number	Description	Quantity
-	DA500104-1	GENERATOR PLATE ASSEMBLY (60 Hz)	-
-	DA500104-3	GENERATOR PLATE ASSEMBLY (50 Hz)	-
1	DA500113-11	PULSE GENERATOR PLATE	1
2	DA500109-1	BEARING BLOCK ASSEMBLY	1
3	DA500105-1	CHAIN GUIDE AND FILTER ASSEMBLY	1
4	DA500117-11	CHAIN GUIDE	1
5	DA500119-11	ADJUSTMENT BLOCK	1
6	DA500155-11	BEARING BLOCK	2
7	SP3732	MOTOR 115V 60HZ WITH SPECIAL SHAFT & LEADS	2
	SP3733	MOTOR 115V 50HZ WITH SPECIAL SHAFT & LEADS	2
8	DA1455-1	BEARING	2
9	DA500128-11	SHIELD	1
10	DA500509-1	THERMAL SENSOR BOARD ASSEMBLY	1
11	DA500107-1	SENSOR ASSEMBLY, MISSING PULSE	2
12	DA500156-11	SHAFT ADAPTER	2
13	35BS18-1/2HT	SPROCKET	4
14	SS1/4-20X.375C	SET SCREW, 1/4-20 3/8, STAINLESS STEEL	8



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 46  
10-05-2000

**IPL Figure 8 Generator Plate Assembly**

Item Number	Part Number	Description	Quantity
15	DA1427-1	BUBBLE LEVEL	1
16	620-10	RESISTOR	1
17	C0240-020-0880S	SPRING	2
18	SHCS4-48X1.0C	SOCKET HEAD CAP SCREW, 4-48 X 1.0, SS	2
19	SBHC4-40X.50C	SOCKET BUTTON HEAD SCREW, 4-40 X 1/2, SS	5
20	WA-4-SLC	WASHER, #4, SPLIT LOCK, STAINLESS STEEL	4
21	.375R10-32X.50A	SPACER	2
22	WA-10-C	WASHER, #10, THICK, STAINLESS STEEL	4
23	SHCS10-32X.875C	SOCKET HEAD CAP SCREW, 10-32 X 7/8, SS	5
24	WA-10-SLC	WASHER, #10, SPLIT LOCK, STAINLESS STEEL	3
25	WA-10-LC	WASHER, #10, THIN, STAINLESS STEEL	9
26	SBHC8-32X.75C	SOCKET BUTTON HEAD SCREW, 8-32 X 3/4, SS	8
27	MS35489-93	MS GROMMET	2
28	SHCS4-40X.375C	SOCKET HEAD CAP SCREW, 4-40 X 3/8, SS	2
29	SBHC8-32X.50C	SOCKET BUTTON HEAD SCREW, 8-32 X 1/2, SS	2
30	WA-8-SLC	WASHER, #8, SPLIT LOCK, STAINLESS STEEL	10
31	WA-4-C	WASHER, #4, THICK, STAINLESS STEEL	14



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 47  
10-05-2000

## **IPL Figure 8 Generator Plate Assembly**

Item Number	Part Number	Description	Quantity
32	SBHC4-40X.75C	SOCKET BUTTON HEAD SCREW , 4-40 X 3/4, SS	2
33	TM1S4-M	CABLE TIE MOUNTS	6
34	SBHC4-40X.25C	SOCKET BUTTON HEAD SCREW , 4-40 X 1/4, SS	6
35	WA-8-LC	WASHER, #8, THIN, STAINLESS STEEL	2




**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 48  
10-05-2000

IPL Figure 9 Bearing Block Assembly

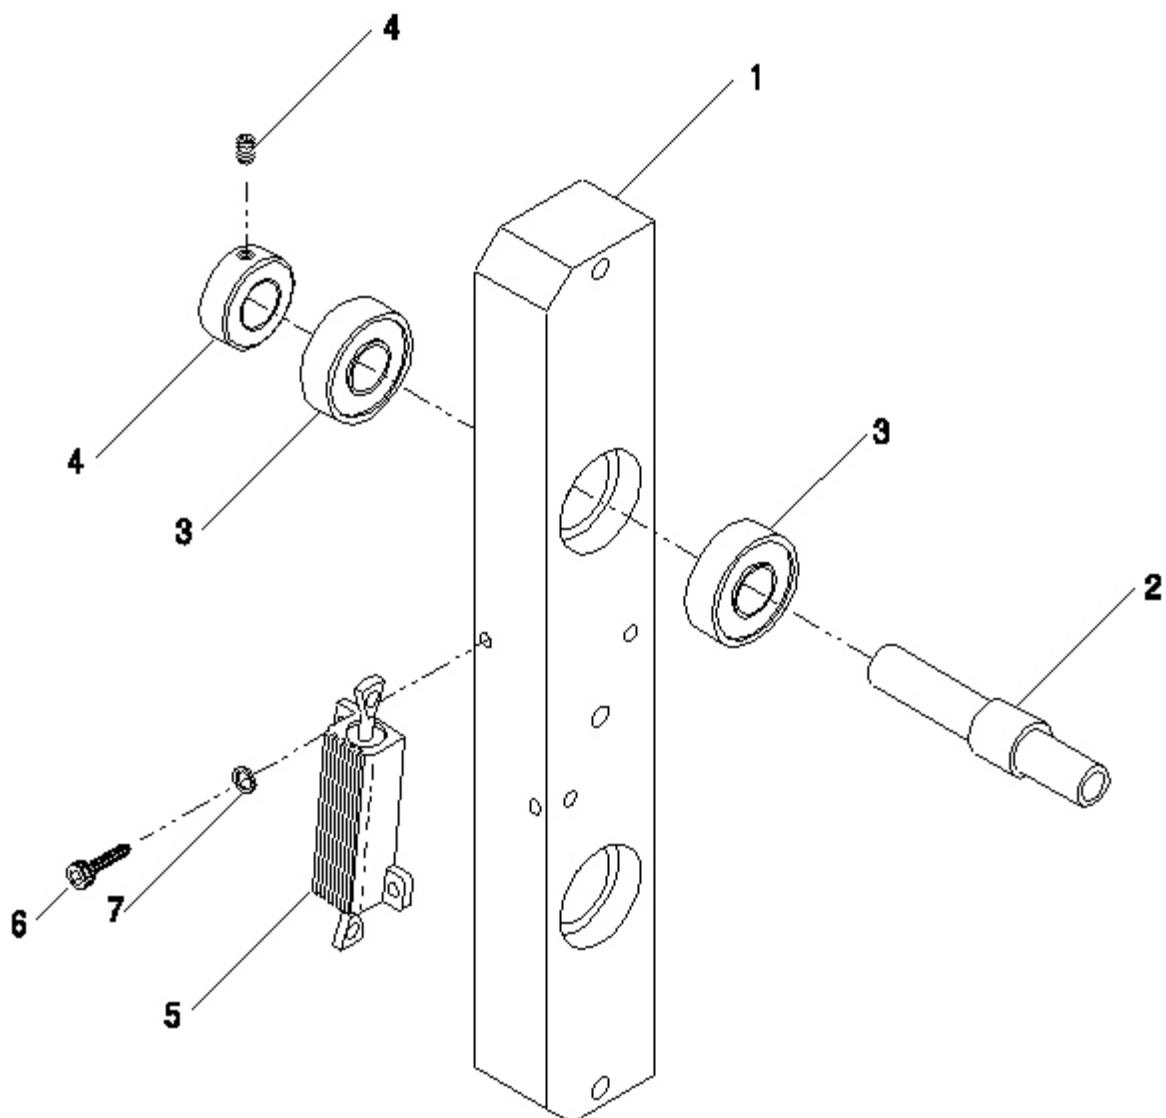

**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 49  
10-05-2000

### **IPL Figure 9   Bearing Block Assembly**


Item Number	Part Number	Description	Quantity
-	DA500109-1	BEARING BLOCK ASSEMBLY	-
1	DA500114-11	BEARING BLOCK, PULSE GENERATOR	1
2	DA500115-11	SHAFT, DRIVEN, PASSIVATED	2
3	DA1455-1	BEARING (SEE DRAWING FOR PART NUMBERS AVAIL.)	4
4	CS-10	COLLAR	2
5	620-10	RESISTOR, 10 OHM 30W 5% BY RCD TYPE 620	1
6	SHCS4-40X.50C	SOCKET HEAD CAP SCREW, 4-40 X 1/2, SS	2
7	WA-4-SLC	WASHER, #4, SPLIT LOCK, STAINLESS STEEL	2



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 50  
10-05-2000

IPL Figure 10 Condenser Lens Assembly

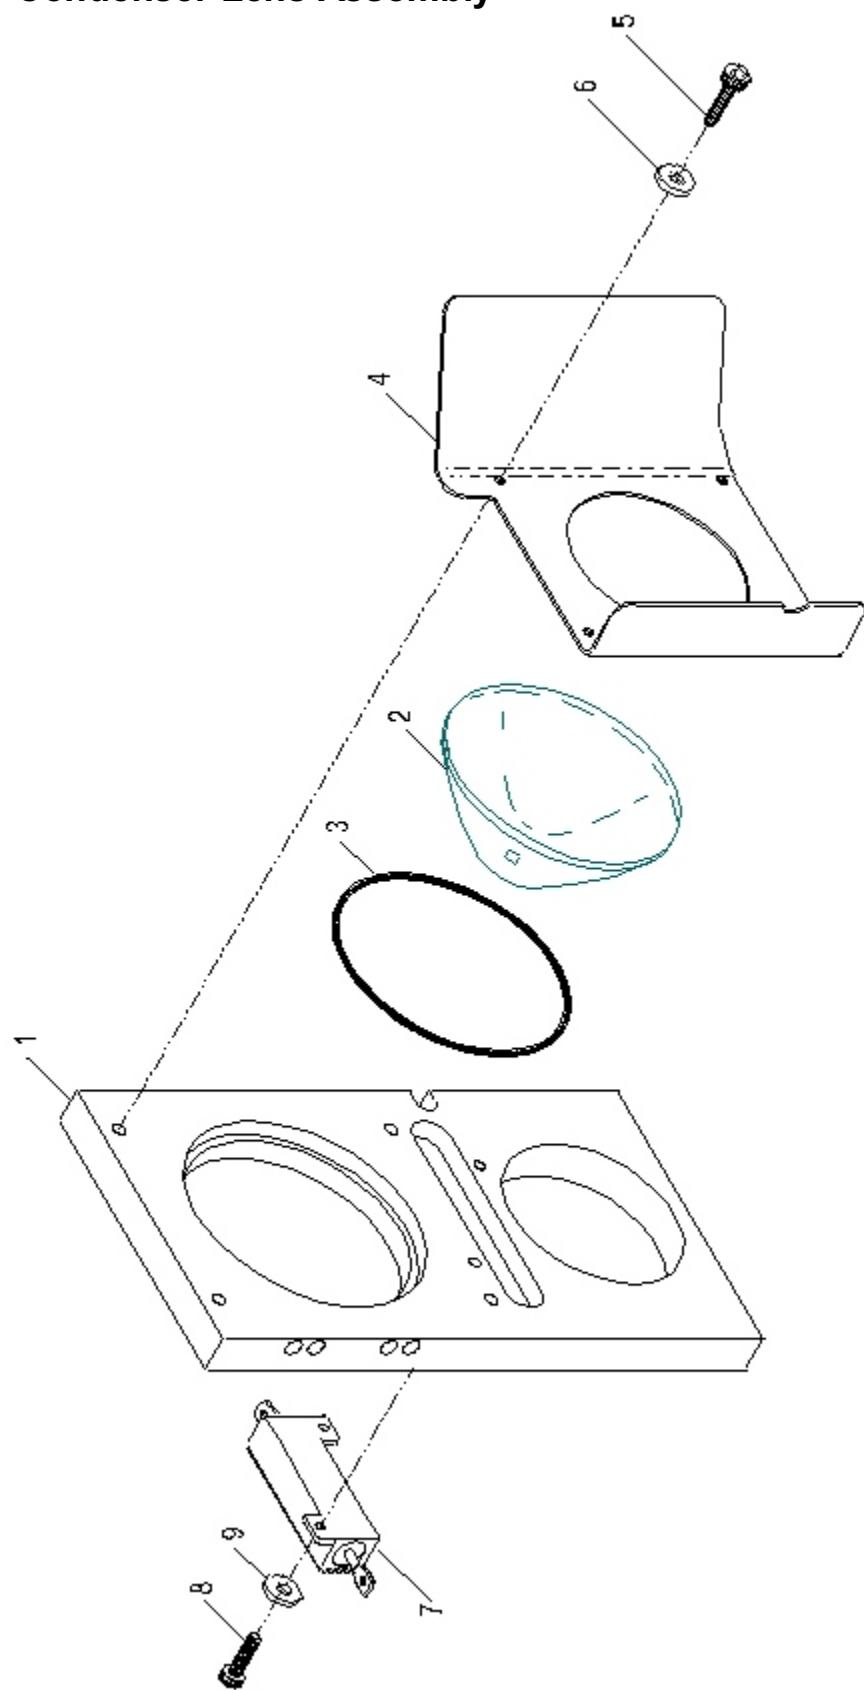

**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 51  
10-05-2000

## IPL Figure 10 Condenser Lens Assembly

Item Number	Part Number	Description	Quantity
-	DA500106-1	CONDENSER LENS ASSEMBLY	-
1	DA500123-11	LENS HOLDER	1
2	01-LAG023	CONDENSER LENS	1
3	2-149V884	GASKET	1
4	DA500120-13	LENS CLAMP, CONDENSER	1
5	SBHC6-32X.375C	SOCKET BUTTON HEAD SCREW , 6-32 X 3/8, SS	4
6	WA-6-LC	WASHER, #6, THIN, STAINLESS STEEL	4
7	620-10	RESISTOR, 10 OHM 30W 5% BY RCD TYPE 620	1
8	SHCS4-40X.50C	SOCKET HEAD CAP SCREW , 4-40 X 1/2, SS	2
9	WA-4-SLC	WASHER, #4, SPLIT LOCK, STAINLESS STEEL	2




**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 52  
10-05-2000

## IPL Figure 11 Leg Assembly

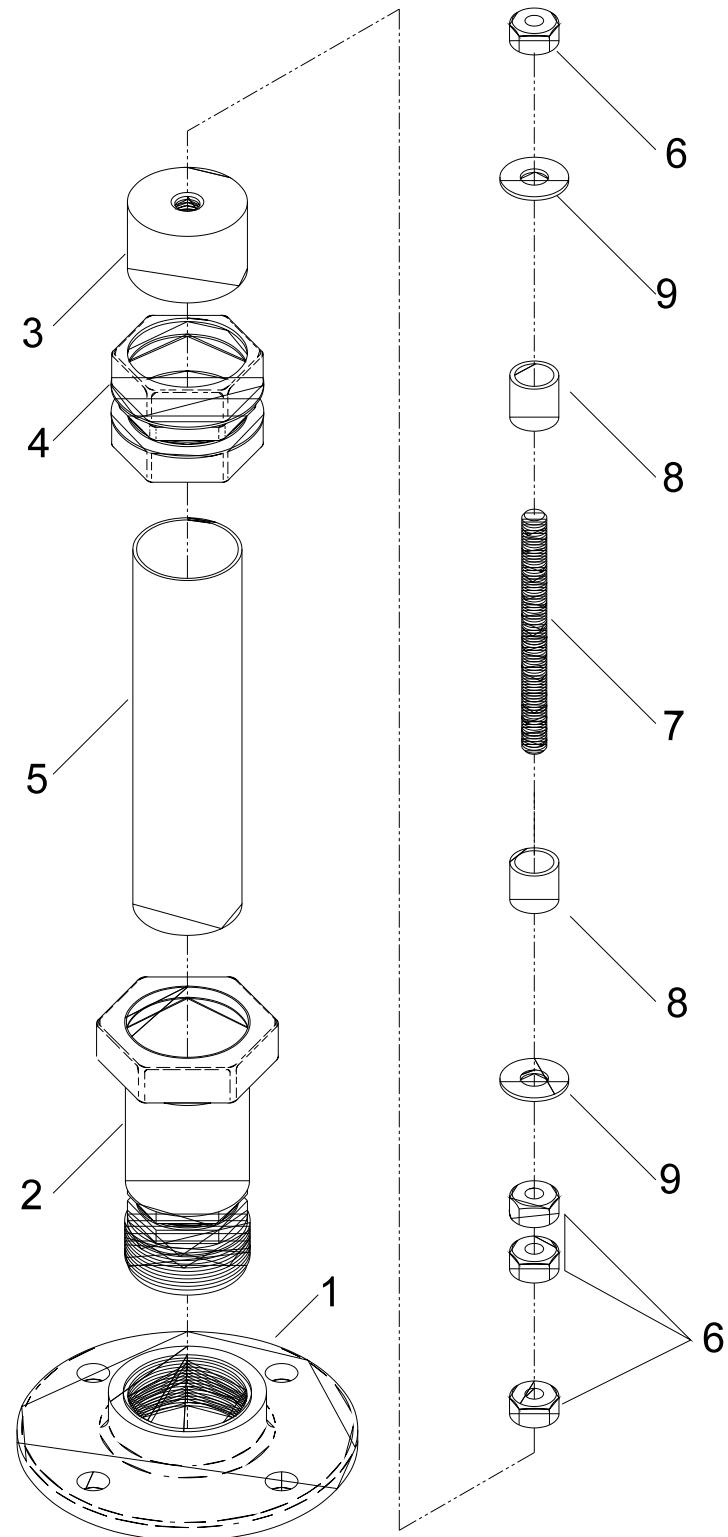

**DeVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA


PLF003  
Page 53  
10-05-2000

## IPL Figure 11 Leg Assembly

Item Number	Part Number	Description	Quantity
-	DA1209-17	LEG SUB ASSEMBLY	3
1	HM6071	MOUNTING FLANGE	1
2	AU5792	FRANGIBLE COUPLING	1
3	AS6025	LEG PLUNGER	1
4	DA1487-1	COUPLING ASSEMBLY	1
5	DA1209-13	LEG	1
-	DA500143-1	SCREW ASSEMBLY (FRONT)	2
6	DA1462-11	JAM NUT	4
7	DA1464-17	ADJUSTMENT SCREW (FRONT)	1
8	.625 R.527X.50C	SPACER	2
9	NAS1149C0863R	WASHER	2
-	DA500143-3	SCREW ASSEMBLY (REAR)	1
6	DA1462-11	JAM NUT	4
7	DA1464-15	ADJUSTMENT SCREW (REAR)	1
8	.625 R.527X.50C	SPACER	2
9	NAS1149C0863R	WASHER	2



IPL Figure 12 Turn Table Final Assembly

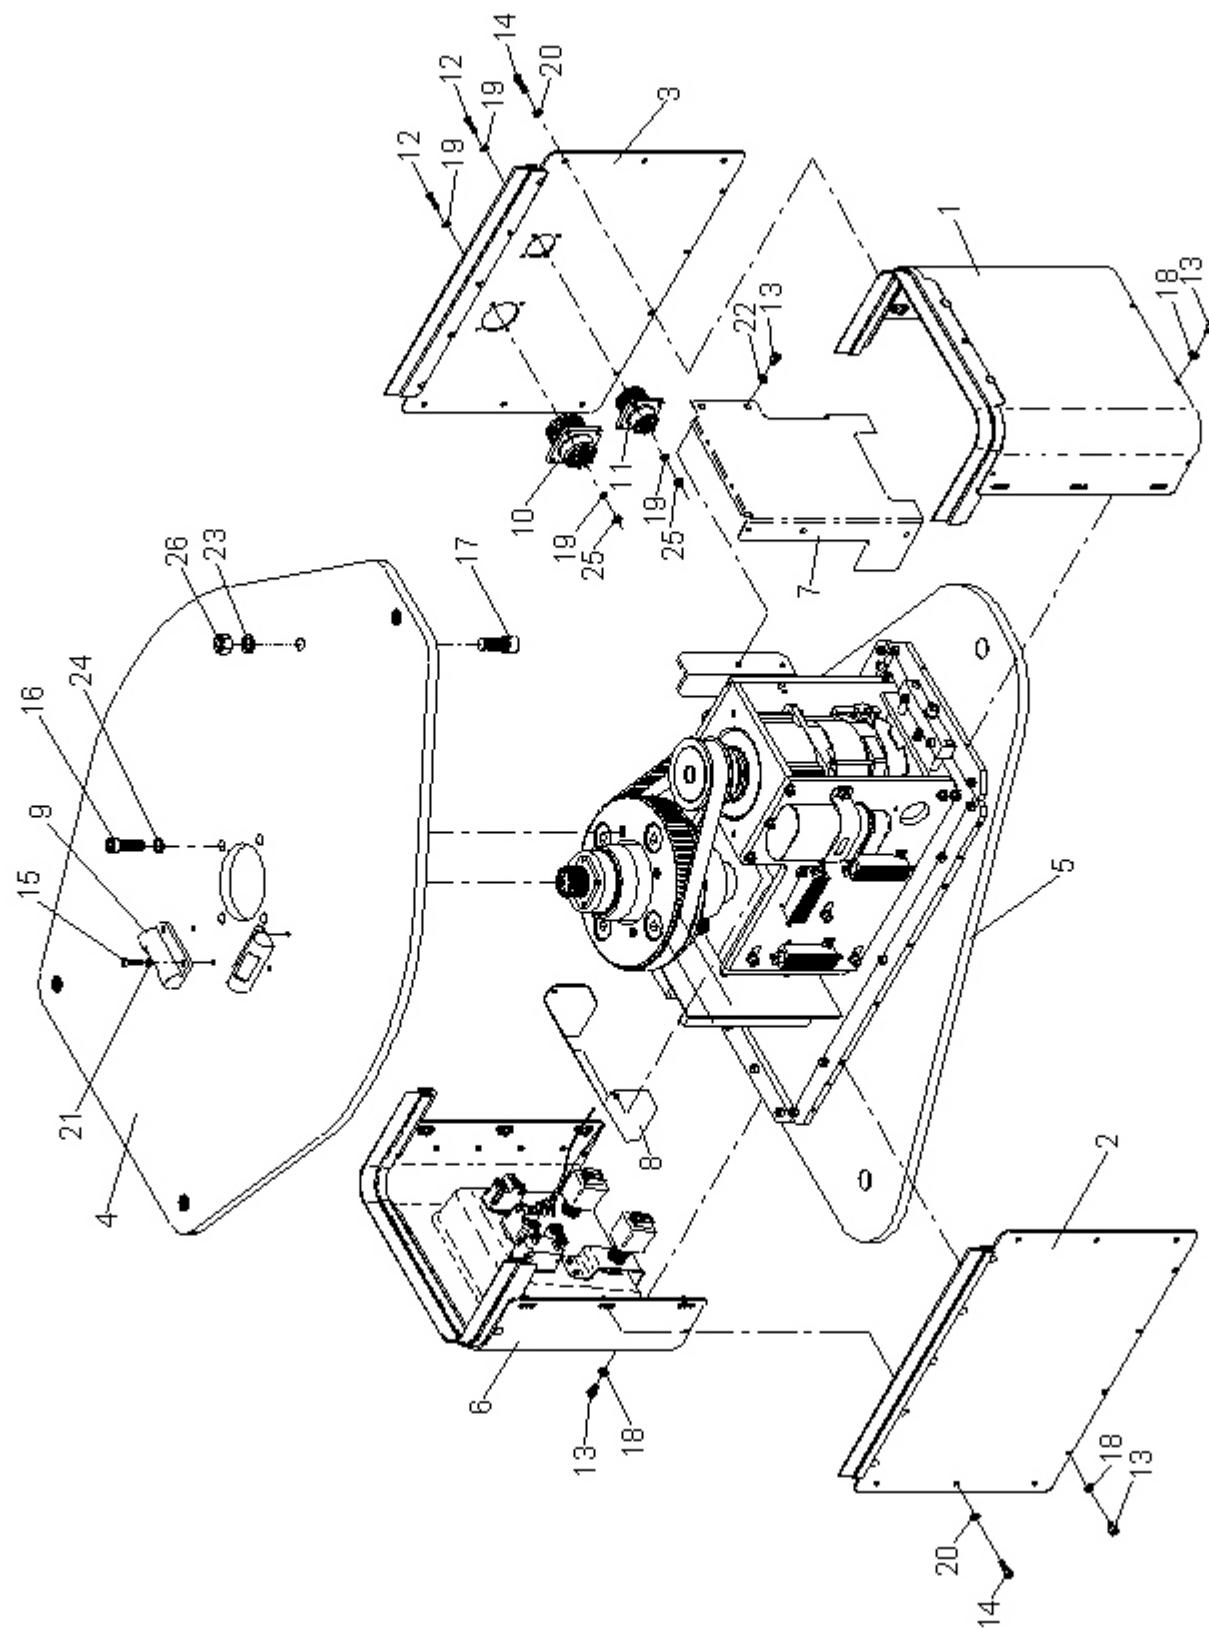

## IPL Figure 12 Turn Table Final Assembly

Item Number	Part Number	Description	Quantity
-	DA500905-1	TURN TABLE FINAL ASSEMBLY	-
1	DA500930-3	END PANEL ASSEMBLY	1
2	DA500945-3	SIDE PANEL ASSEMBLY, RH	1
3	DA500945-1	SIDE PANEL ASSEMBLY, LH	1
4	DA500911-11	TABLE TOP, TURNTABLE	1
5	DA500906-1	BASE ASSEMBLY	1
6	DA500907-1	DOOR PANEL ASSEMBLY	1
7	DA500976-11	DUST COVER, AFT	1
8	DA500975-11	DUST COVER, FWD	1
9	DA1427-1	BUBBLE LEVEL	2
10	MS3102-R20-33S	RECEPTACLE	1
11	MS3102-R16-10P	RECEPTACLE	1
12	SHCS4-40X.50C	SOCKET HEAD CAP SCREW , 4-40 X 1/2, SS	8
13	SHCS6-32X.25C	SOCKET HEAD CAP SCREW , 6-32 X 1/4, SS	18
14	SHCS6-32X.50C	SOCKET HEAD CAP SCREW , 6-32 X 1/2, SS	12
15	SBHC6-32X.50C	SOCKET BUTTON HEAD SCREW , 6-32 X 1/2, SS	4
16	SHCS5/16-18X1C	SOCKET HEAD CAP SCREW , 5/16-18 X 1.0, SS	4
17	SHCS3/8-24X1.0	SOCKET HEAD CAP SCREW , 3/8-24 X 1.0, SS	1



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 56  
10-05-2000

**IPL Figure 12 Turn Table Final Assembly**


Item Number	Part Number	Description	Quantity
18	NAS620A4	NAS WASHER	16
19	WA-4-C	WASHER, #4, THICK, STAINLESS STEEL	16
20	WA-6-C	WASHER, #6, THICK, STAINLESS STEEL	12
21	WA-6-LC	WASHER, #6, THIN, STAINLESS STEEL	4
22	WA-6-SLC	WASHER, #6, SPLIT LOCK, STAINLESS STEEL	2
23	NAS1149C0663R	WASHER	1
24	WA-5/16-C	WASHER, 5/16, THICK, STAINLESS STEEL	4
25	MS21044N04	NUT	8
26	MS21044N6	NUT	1



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 57  
10-05-2000

IPL Figure 13 Base Assembly

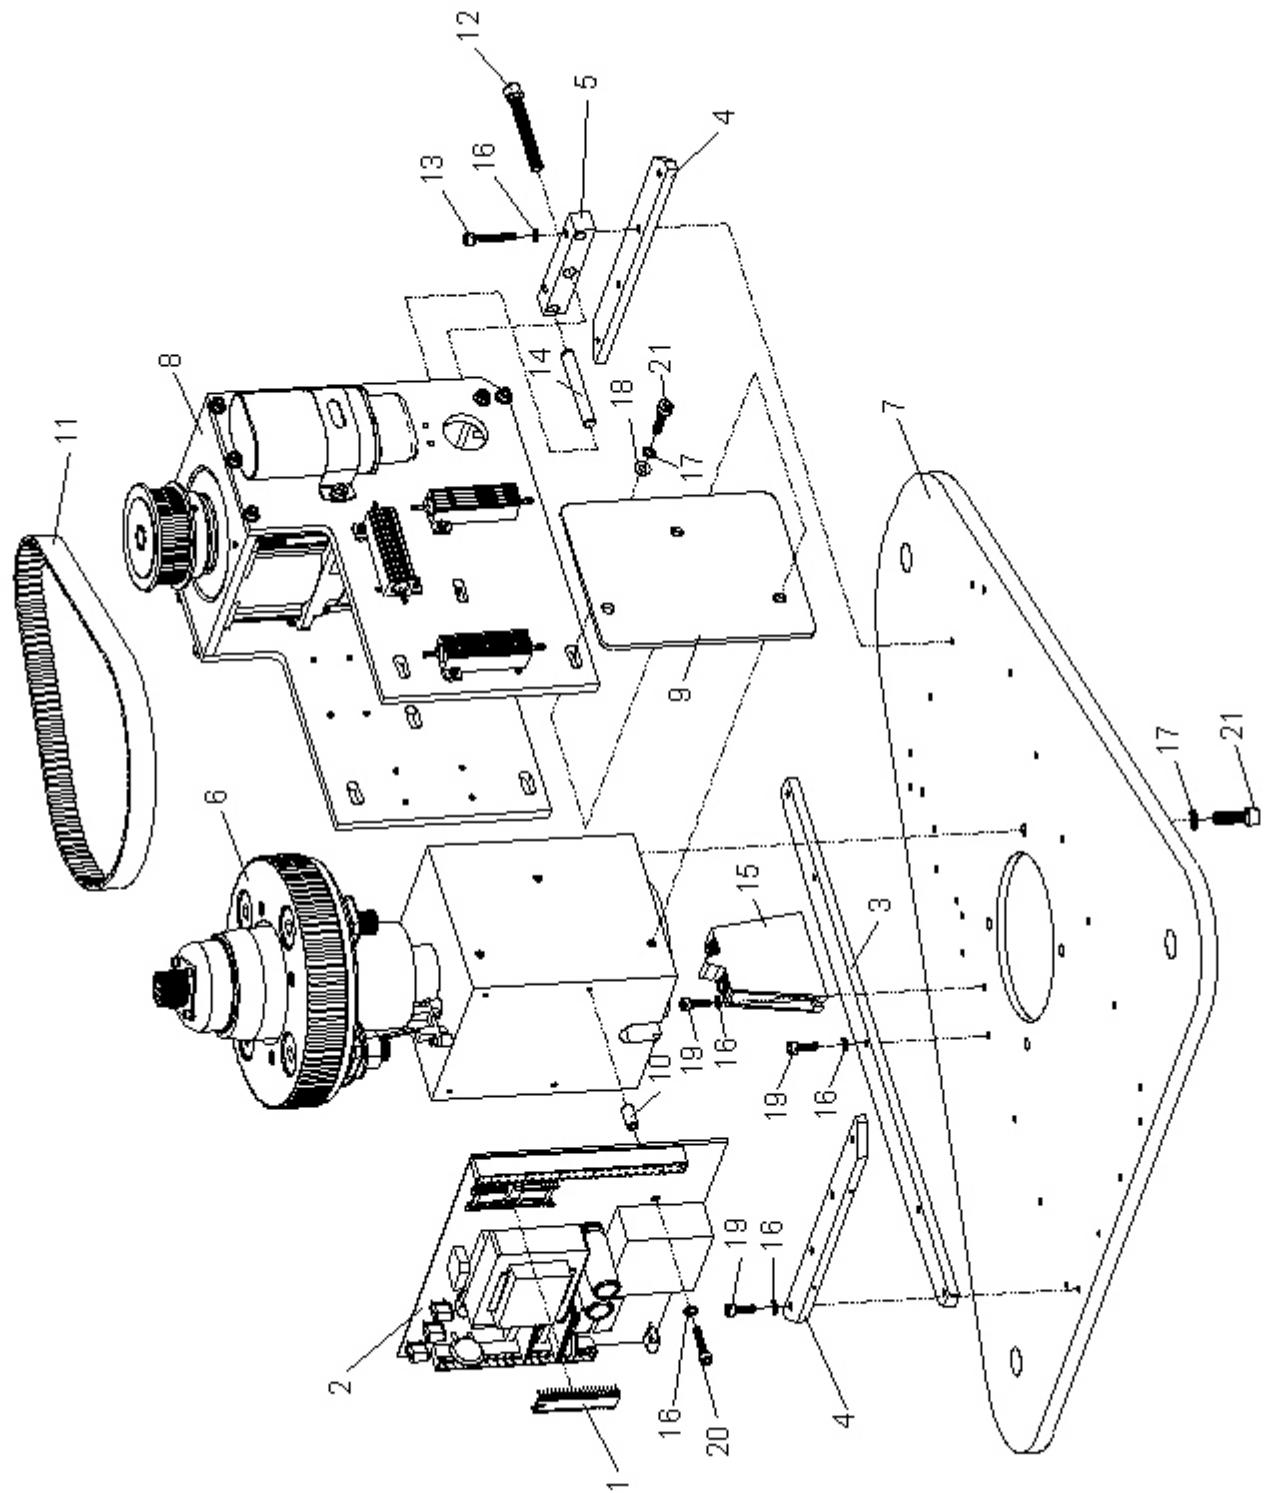

**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA  
OF AMERICA

PLF003  
Page 58  
10-05-2000

**IPL Figure 13 Base Assembly**

Item Number	Part Number	Description	Quantity
-	DA500906-1	BASE ASSEMBLY	-
1	DA500955-1	TURNTABLE CONTROLLER CHIP	1
2	DA500950-1	CIRCUIT BOARD ASSEMBLY	1
3	DA500927-13	BAR, ENCLOSURE	2
4	DA500927-11	BAR, ENCLOSURE	2
5	DA500938-11	TENSIONER BLOCK	1
6	DA500908-1	SPINDLE ASSEMBLY	1
7	DA500912-11	BASE PLATE, TURNTABLE	1
8	DA500909-1	MOTOR BRACKET ASSEMBLY	1
9	DA500936-13	SPACER	2
10	94639A303	STANDOFF	4
11	5MR-600-15	BELT, GATES	1
12	SHCS1/4-28X2.0C	SOCKET HEAD CAP SCREW , 1/4-28 X 2.0, SS	1
13	SHCS6-32X1.0C	SOCKET HEAD CAP SCREW , 6-32 X 1.0, SS	2
14	9Y31-0864	DOWEL	2
15	V131DA40	VARISTOR	2
16	WA-6-SLC	WASHER, #6, SPLIT LOCK, STAINLESS STEEL	26
17	WA-1/4-SLC	WASHER, 1/4, SPLIT LOCK, STAINLESS STEEL	10



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 59  
10-05-2000

**IPL Figure 13 Base Assembly**

Item Number	Part Number	Description	Quantity
18	WA-1/4-C	WASHER, 1/4, THICK, STAINLESS STEEL	6
19	SHCS6-32X.50C	SOCKET HEAD CAP SCREW, 6-32 X 1/2, SS	20
20	SHCS6-32X.75C	SOCKET HEAD CAP SCREW, 6-32 X 3/4, SS	4
21	SHCS1/4-20X.75C	SOCKET HEAD CAP SCREW, 1/4-20 X 3/4, SS	10




**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 60  
10-05-2000

IPL Figure 14 Spindle Assembly

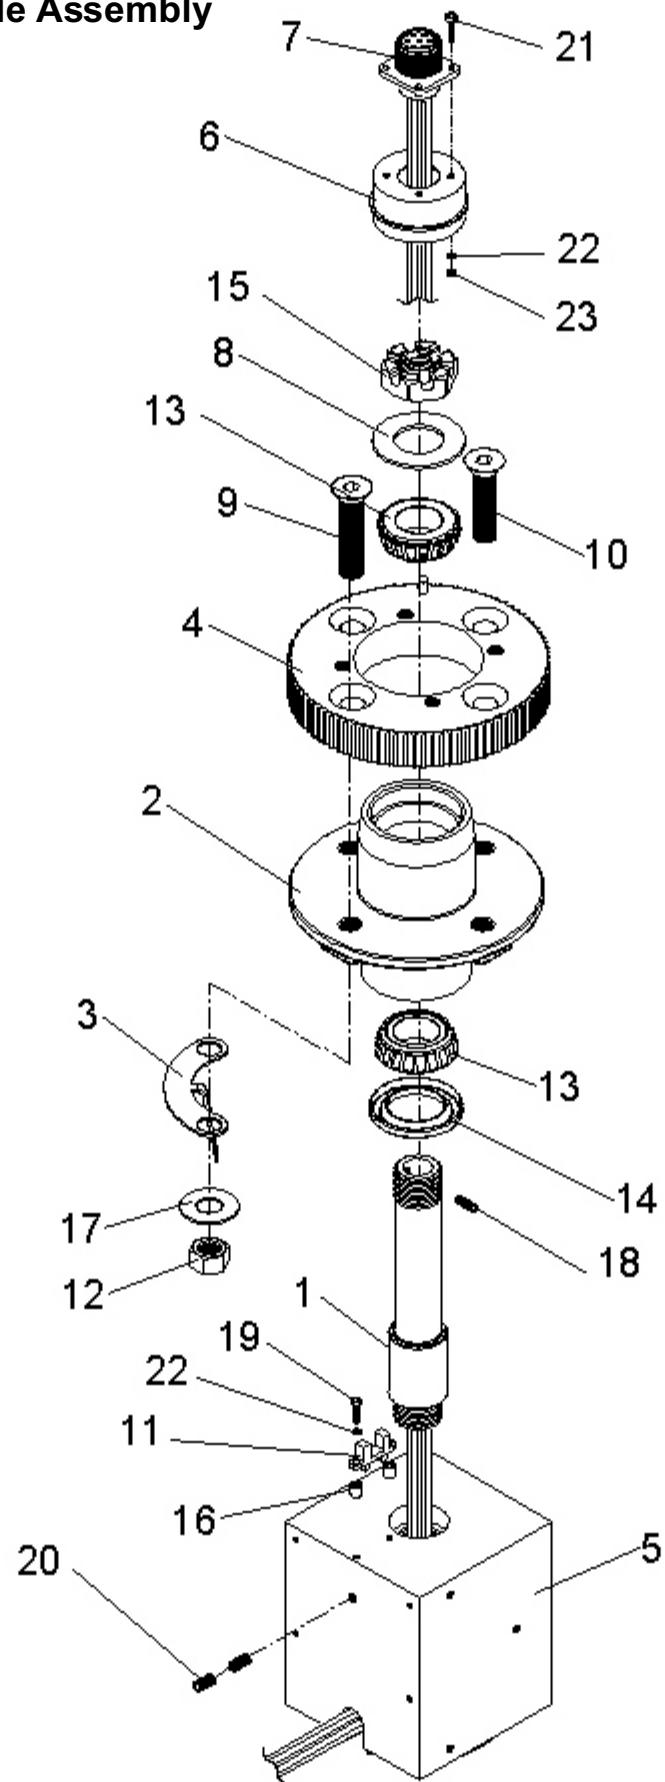

**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

## IPL Figure 14 Spindle Assembly

Item Number	Part Number	Description	Quantity
-	DA500908-1	SPINDLE ASSEMBLY	-
1	DA500941-1	SPINDLE SHAFT	1
2	DA500937-11	HUB	1
3	DA500921-11	POINTER, HOME	1
4	DA500918-11	SPROCKET	1
5	DA500910-11	SPINDLE BLOCK	1
6	DA500925-11	DUST COVER	1
7	DA500946-3	CABLE ASSEMBLY	1
8	NAS1149F1690P	WASHER, 1 ID, STEEL, CAD II PLATING	1
9	SFHG1/2-20X2.5C	SOCKET FLAT HEAD SCREW, 1/2-20 X 2 1/2, SS	2
10	SFHG1/2-20X2.0C	SOCKET FLAT HEAD SCREW, 1/2-20 X 2.0, SS	2
11	OPB810W51	SLOTTED SENSOR BY OPTEK	1
12	MS21044N8	NUT	2
13	L44643	BEARING CONE FOR 1" SPINDLE	2
14	GS1	SEAL	1
15	AN1	CASTLE NUT FOR 1" SPINDLE	1
16	90309A219	STANDOFF (25-PK)	2
17	WA-1/2-C	WASHER, 1/2, THICK, STAINLESS STEEL	2



### IPL Figure 14 Spindle Assembly


Item Number	Part Number	Description	Quantity
18	SS10-32X.50C	SET SCREW, 10-32 X 1/2, STAINLESS STEEL	1
19	SHCS4-40X.50C	SOCKET HEAD CAP SCREW, 4-40 X 1/2, SS	2
20	SS1/4-20X.375C	SET SCREW	2
21	SHCS4-40X.375C	SOCKET HEAD CAP SCREW, 4-40 X 3/8, SS	4
22	NAS620C4	WASHER	6
23	MS21042L04	NUT	4



**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 63  
10-05-2000

IPL Figure 15 Motor Bracket Assembly

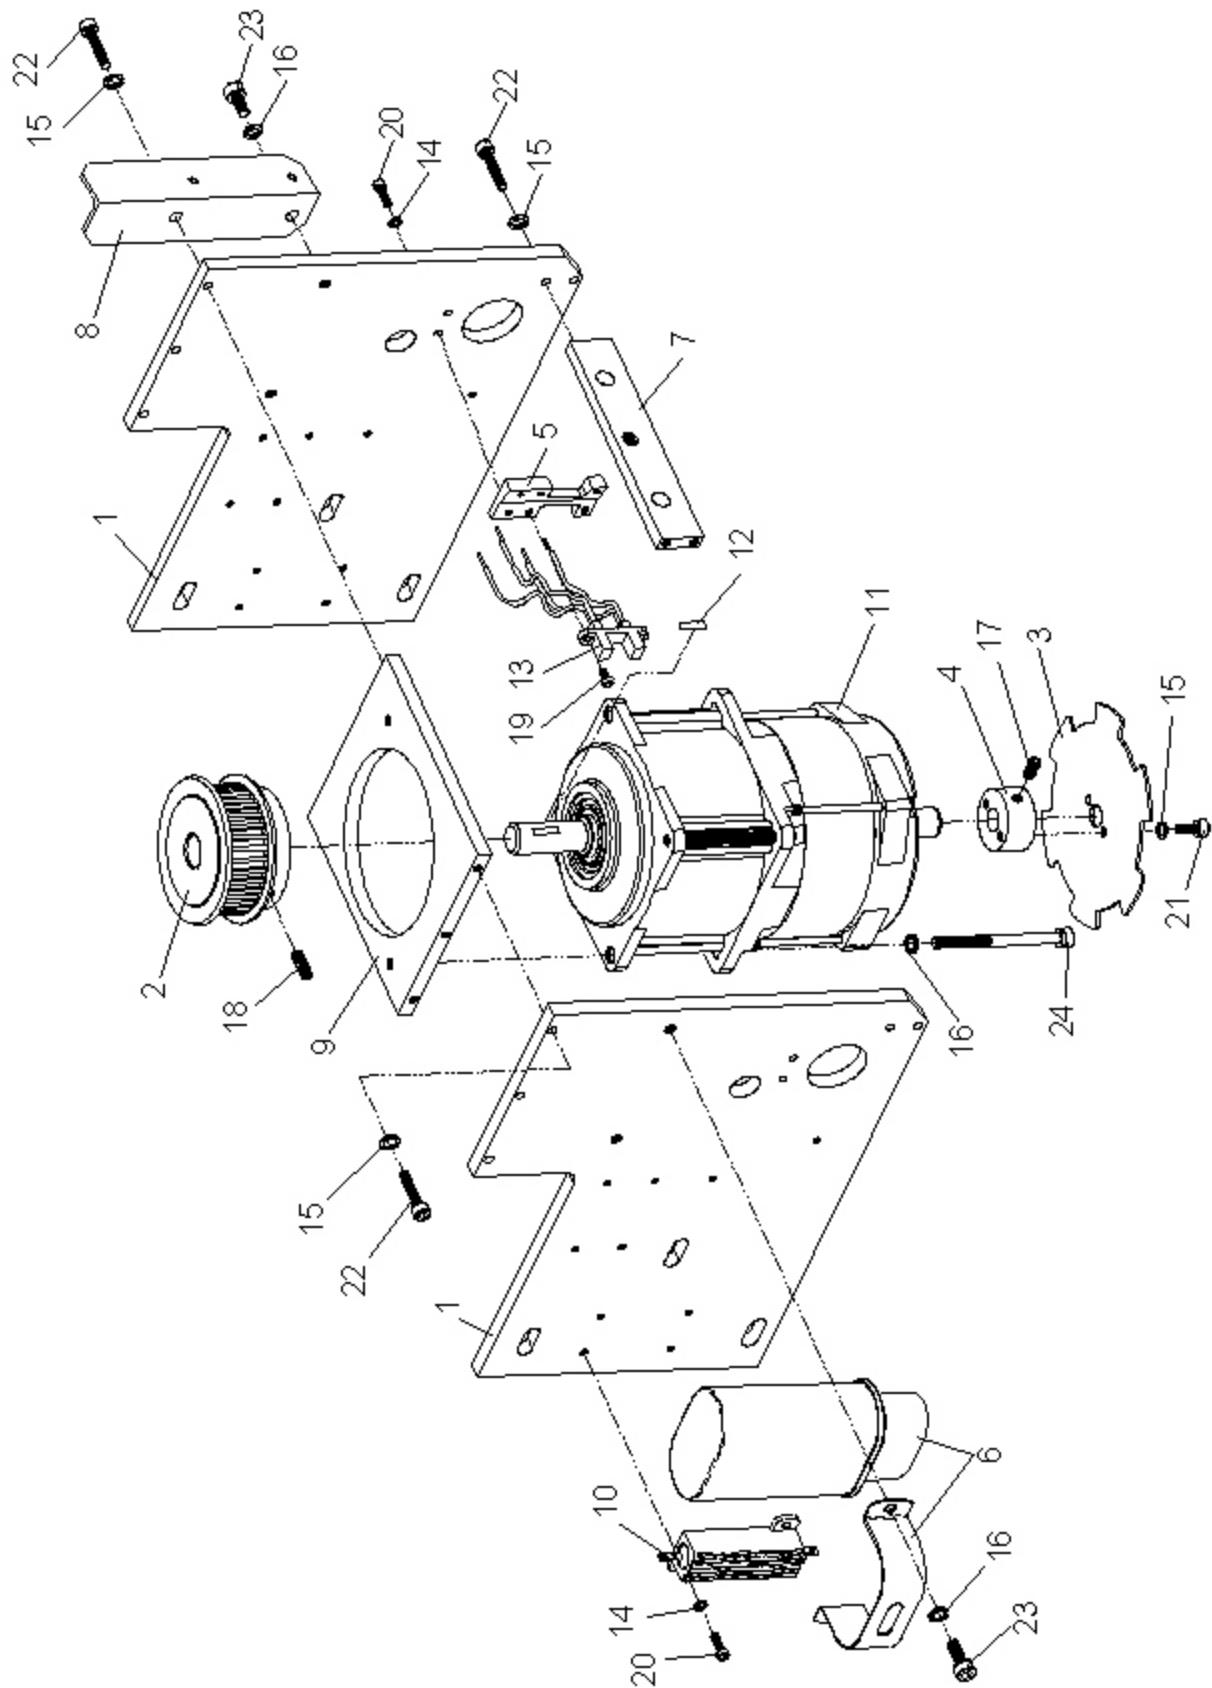

**DeVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

PLF003  
Page 64  
10-05-2000

### IPL Figure 15 Motor Bracket Assembly

Item Number	Part Number	Description	Quantity
-	DA500909-1	MOTOR BRACKET ASSEMBLY	-
1	DA500935-11	SUPPORT BRACKET, MOTOR	2
2	DA500919-11	SPROCKET, DRIVER	1
3	DA500915-11	ENCODER DISK, TURNTABLE	1
4	DA500914-11	ENCODER HUB, TURNTABLE	1
5	DA500913-11	SENSOR MOUNT, TURNTABLE	1
6	DA1471-1	CAPACITOR ASSY	1
7	DA500939-11	TENSIONER BAR	1
8	DA500949-11	MECHANICAL STOP	1
9	DA500936-11	PLATE, MOTOR SUPPORT	1
10	620-10	RESISTOR, 10 OHM 30W 5% BY RCD TYPE 620	5
11	SS221LEG20	GEARMOTOR 72RPM DOUBLE ENDED SHAFT, SUPERIOR	1
12	WK1/8X5/8	WOODRUFF KEY	1
13	OPB810W51	SLOTTED SENSOR BY OPTEK	2
14	WA-4-SLC	WASHER, #4, SPLIT LOCK, STAINLESS STEEL	12
15	WA-6-SLC	WASHER, #6, SPLIT LOCK, STAINLESS STEEL	12
16	WA-10-SLC	WASHER, #10, SPLIT LOCK, STAINLESS STEEL	5



### IPL Figure 15 Motor Bracket Assembly

Item Number	Part Number	Description	Quantity
17	SS8-32X.375C	SET SCREW , 8-32 X 3/8, STAINLESS STEEL	1
18	SS10-32X.50C	SET SCREW , 10-32 X 1/2, STAINLESS STEEL	1
19	SBHC4-40X.25C	SOCKET BUTTON HEAD SCREW , 4-40 X 1/4, SS	4
20	SHCS4-40X.375C	SOCKET HEAD CAP SCREW , 4-40 X 3/8, SS	12
21	SHCS6-32X.375C	SOCKET HEAD CAP SCREW , 6-32 X 3/8, SS	2
22	SHCS6-32X.75C	SOCKET HEAD CAP SCREW , 6-32 X 3/4, SS	10
23	SHCS10-32X.50C	SOCKET HEAD CAP SCREW , 10-32 X 1/2, SS	3
24	SHCS10-32X2.25C	SOCKET HEAD CAP SCREW , 10-32 X 2 1/4, SS	2




**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 66  
10-05-2000

IPL Figure 16 Final Door Assembly

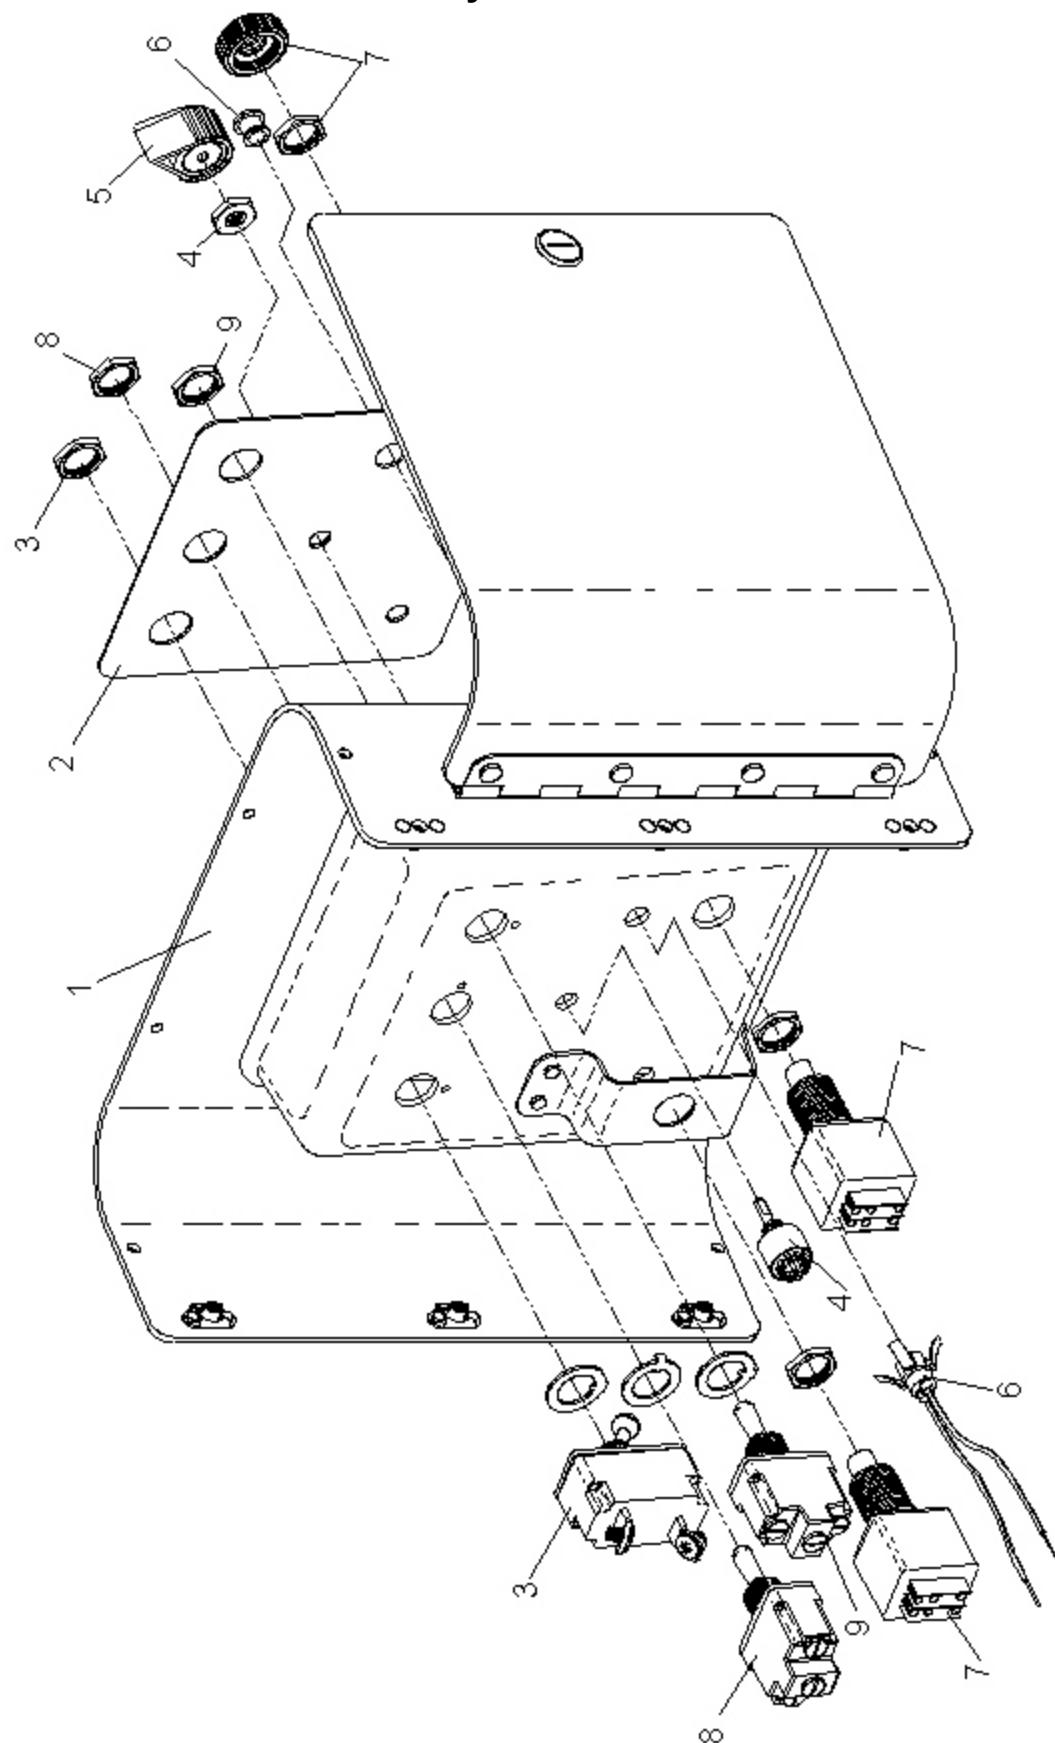

**DEVORE AVIATION CORPORATION**  
ALBUQUERQUE, NEW MEXICO, USA

OF AMERICA

PLF003  
Page 67  
10-05-2000

## IPL Figure 16 Final Door Assembly

Item Number	Part Number	Description	Quantity
-	DA500907-1	FINAL DOOR ASSEMBLY	-
1	DA500930-1	DOOR PANEL ASSEMBLY	1
2	DA500926-11	FACE PLATE	1
3	MS24509-A-15	CIRCUIT BREAKER, 15 AMP TOGGLE	1
4	MA04S1NZGF	SWITCH, ROTARY, C-K	1
5	70-4-1G	KNOB, EHC	1
6	5400A5	LED PANEL MOUNT GREEN	2
7	2PB901-T2	SWITCH, MICROSWITCH	2
8	1TL1-7	SWITCH, MICROSWITCH	2
9	1TL1-1	SWITCH, MICROSWITCH	1

